you can

Canon

Canon WFT-E1 (A) Wireless File Transmitter

Network Support Guide

Windows XP – Wired LAN Connection with a LAN router.

Authored by Simon Adams Product Support Specialist Canon UK RCC

Revision 1.2 © Canon 2006

Setting up the WFT-E1A on Windows XP Home or Professional – Wired Lan with a Router

This document will take you through the process of setting up the WFT-E1A file transmitter in conjunction with a PC running Windows XP Home or Professional Edition.

In this example we have used the following test specifications:

Canon Eos 1DS Mk II Camera Body
Canon WFT-E1A Wireless File Transmitter
Standard RJ45 to RJ45 Network Cable
Belkin F5D52314 4-Port Cable/DSL Router
Pentium III 1Ghz PC with 512MB Ram
Realtek RTL8139 Family PCI Fast Ethernet 10/100 LAN Card installed in PC
Windows XP Home or Professional Edition
Filezilla FTP Server Version 0.9.11

Three Stages to Complete Setup

There are three stages to setting up the WFT-E1A with your PC.

1. Checking your Network Settings on your computer and router
2. Setting up your FTP Server on your computer
3. Setting up your WFT-E1A to talk to your router and FTP Server

Stage 1 – Checking your Network Settings on your computer and router

Stage 1 will involve installing a router on your PC. The router should come with a manufacturer's installation disk that installs the necessary software for the router.

If you experience difficulties installing your router on your PC you should contact your router manufacturer for assistance with its installation.

We will start the network set up with the assumption that you have installed your wired LAN router and it is working correctly, and that your PC is connected to the router via an RJ45 network cable plugged into your Ethernet card in your PC.

 © Canon 2006

On your desktop, right click on the “My Network Places” icon.

Select Properties

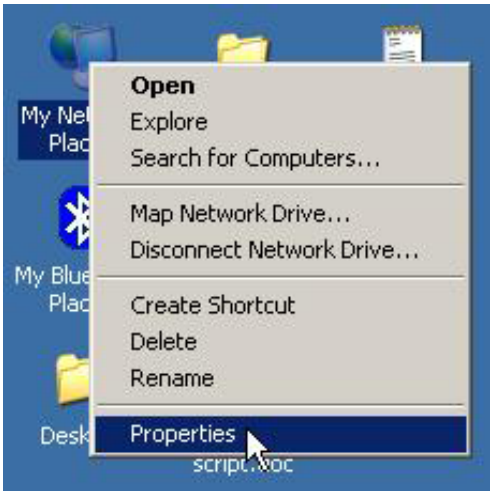

This opens your Network Connections pane. If you have a correctly installed Network Card on your computer you should see the Local Area Connection entry displayed here.

Right Click on your Local Area Connection and select Properties.

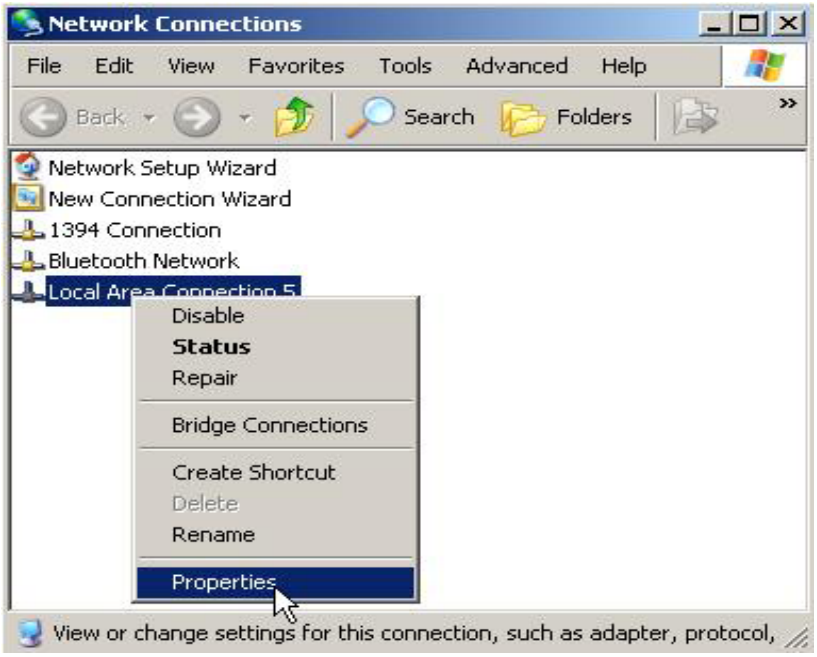

 © Canon 2006

This brings up the Local Area Connection Properties dialog box

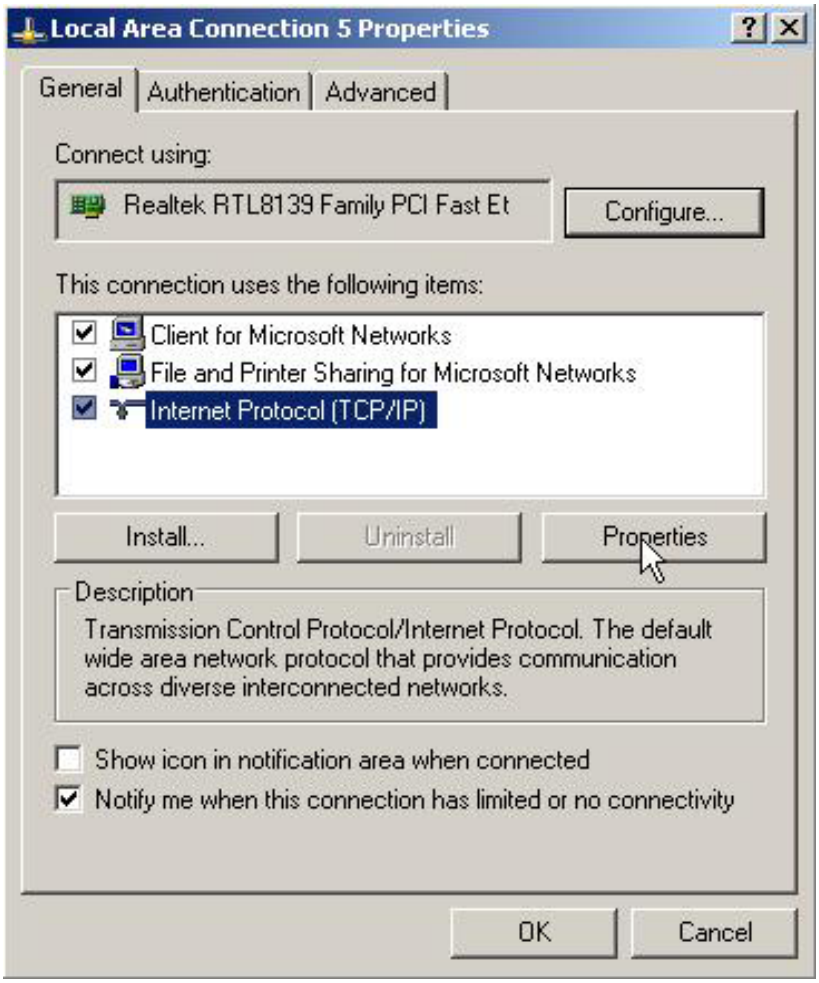

In the Local Area Connections dialog box you should see Client for Microsoft Networks, File and Printer Sharing for Microsoft Networks and Internet Protocol (TCP/IP). If you your dialog box does not contain all of the above, or has different entries, you should contact your PC support company to assist you in installing the relevant Windows Networking Components from your XP Home or Professional original disk, as these are an intrinsic part of the operating system.

 © Canon 2006

We will need to create a static IP address for the computer on the network.

To do this, select the General tab, select Internet Protocol (TCP/IP) and click the Properties button.

You should now see the following screen. In this screen, select "Use the Following IP address, and enter a unique IP address for the computer running the FTP server. In this example we have used 192.168.0.40 which will be the IP address which identifies the PC to the network. **When selecting an IP address for the computer ensure that it is outside the range of addresses specified in the IP address pool of your router.** The Subnet mask should be set to 255.255.255.0 as the only number range in the IP address that is going to alter is the last set of numbers. The Default Gateway should be set to your router's IP address; in this case the Belkin router's address is 192.168.2.1. Nothing needs changing under "Advanced" so leave that as is. If you have an internet connection attached to your router, leave the DNS servers as they are, if you don't have an internet connection attached to your router, leave the DNS server entries blank.

If these settings are already filled in, take a note of what they are and leave as is. You will need these settings to enter into the WFT-E1A later.

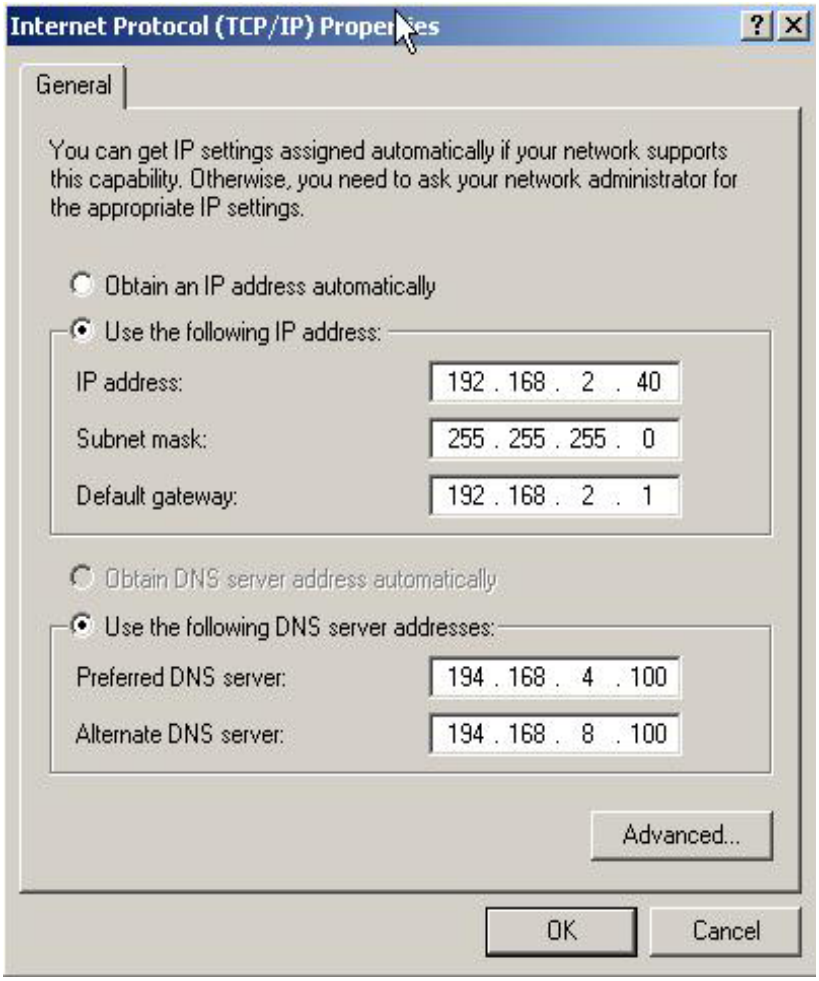
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 2 . 40
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 2 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server: 194 . 168 . 4 . 100
Alternate DNS server: 194 . 168 . 8 . 100
Advanced...
OK
Cancel

Click on OK to return to the Local Area Connection Properties screen.

 © Canon 2006

You now need to select the authentication tab on the Local Area Connection screen, to check that the following settings are enabled. No advanced settings need to be changed so click OK.

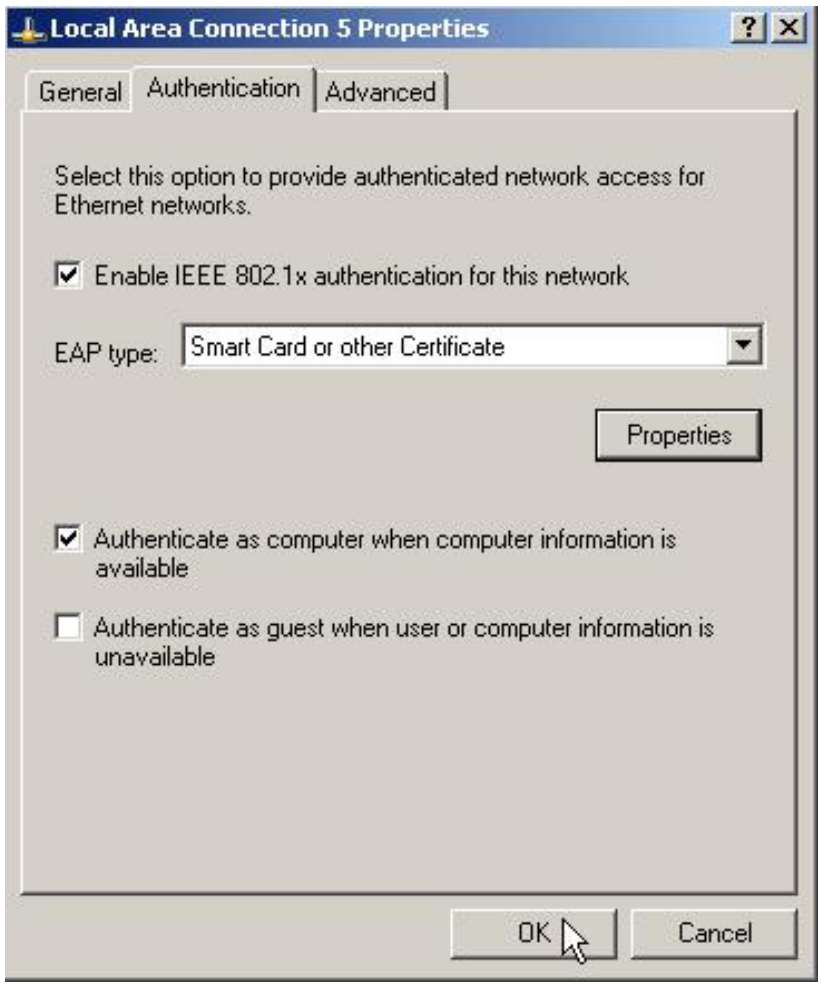
Local Area Connection 5 Properties
General
Authentication
Advanced
Select this option to provide authenticated network access for Ethernet networks.
Enable IEEE 802.1x authentication for this network
EAP type:
Smart Card or other Certificate
Properties
Authenticate as computer when computer information is available
Authenticate as guest when user or computer information is unavailable
OK
Cancel

 © Canon 2006

This will return you to the Wireless Network Connection Properties screen. Click on the “Advanced” tab and under Windows Firewall click the Settings Button.

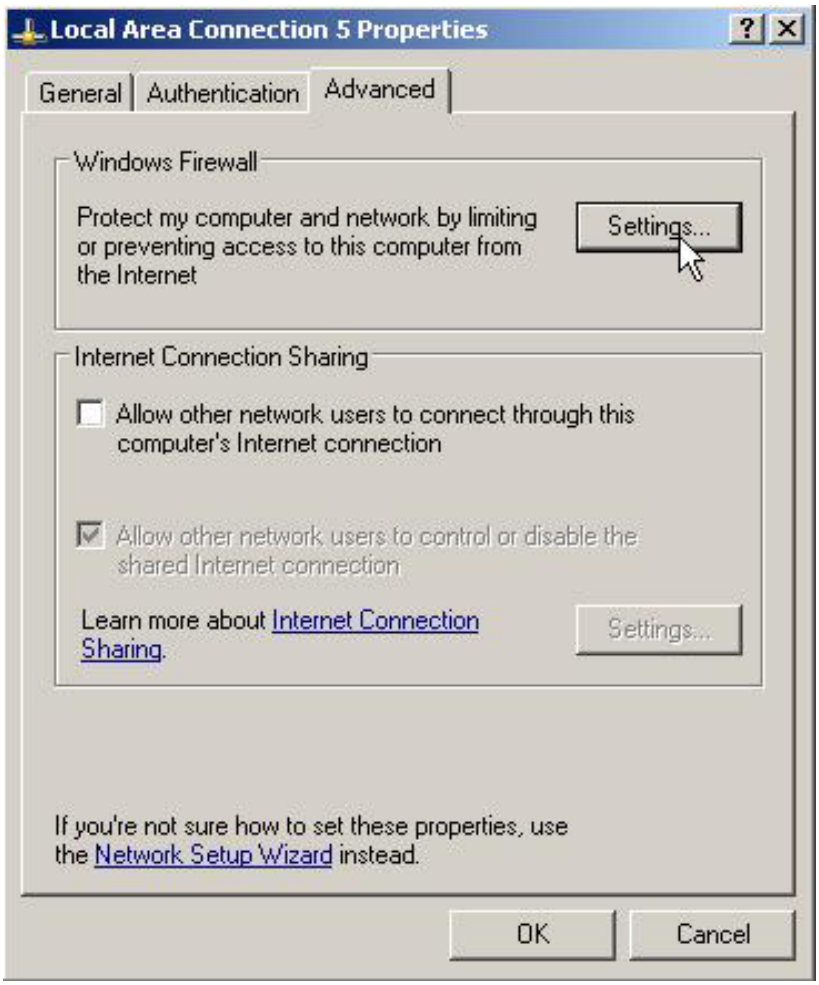
Local Area Connection 5 Properties
General
Authentication
Advanced
Windows Firewall
Protect my computer and network by limiting or preventing access to this computer from the Internet
Settings...
Internet Connection Sharing
Allow other network users to connect through this computer's Internet connection
Allow other network users to control or disable the shared Internet connection
Learn more about Internet Connection Sharing.
Settings...
If you're not sure how to set these properties, use the Network Setup Wizard instead.
OK
Cancel

 © Canon 2006

On the Windows Firewall screen, if you do not require a firewall to be active then select “Off”. If you do require a firewall you will need to carry out the next step to allow the FTP port to be allowed through.

Windows Firewall
General
Exceptions
Advanced
Windows Firewall is helping to protect your PC
Windows Firewall helps protect your computer by preventing unauthorized users from gaining access to your computer through the Internet or a network.
On (recommended)
This setting blocks all outside sources from connecting to this computer, with the exception of those selected on the Exceptions tab.
Don't allow exceptions
Select this when you connect to public networks in less secure locations, such as airports. You will not be notified when Windows Firewall blocks programs. Selections on the Exceptions tab will be ignored.
Off (not recommended)
Avoid using this setting. Turning off Windows Firewall may make this computer more vulnerable to viruses and intruders.
What else should I know about Windows Firewall?
OK
Cancel

 © Canon 2006

 © Canon 2006

If you elect to switch on your firewall, click on the “Exceptions” tab. And click on the Add Port button

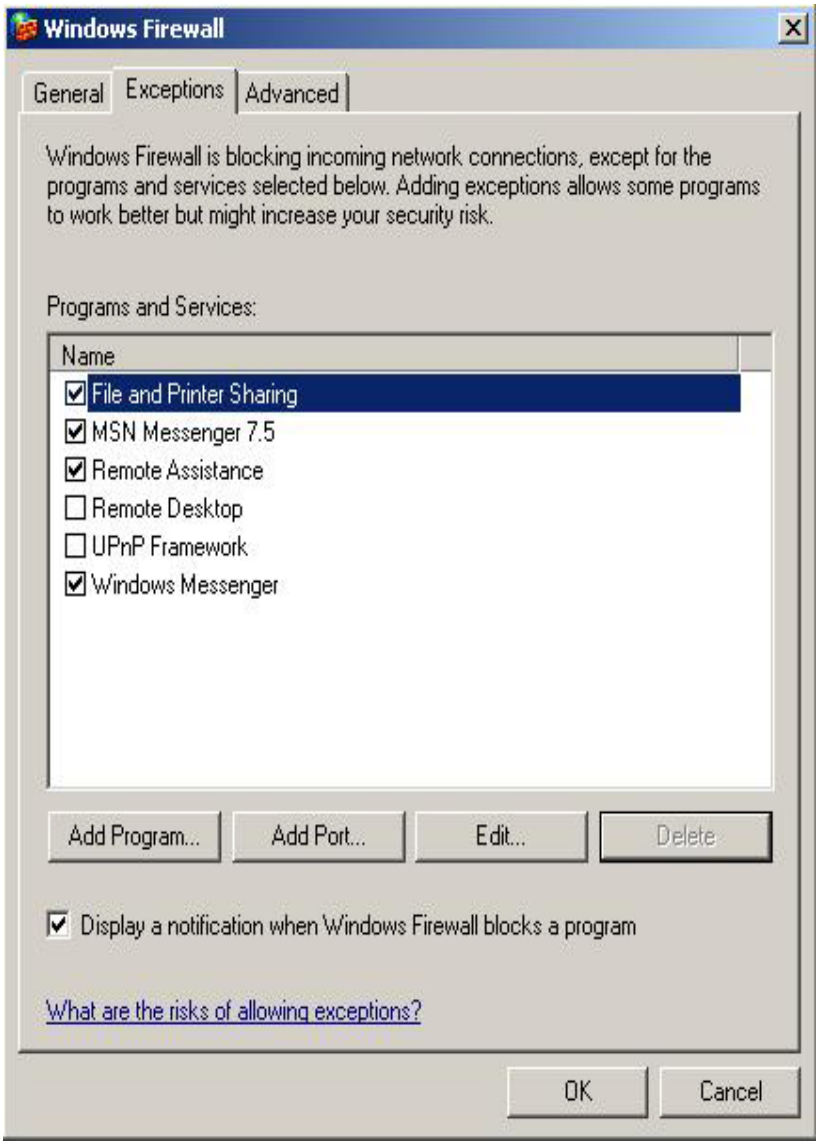

Revision 1.2 © Canon 2006

In the Add a Port screen, enter the name as FTP-TCP, and the port number as 21. Make sure TCP is selected. This will open a TCP connection on port 21through the firewall to enable control communication between the WFT-E1A and the FTP server. Now click on OK.

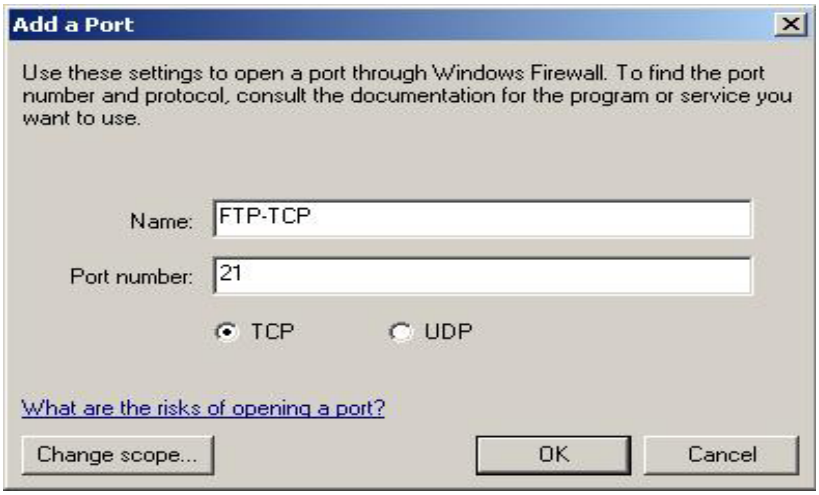
Add a Port
Use these settings to open a port through Windows Firewall. To find the port number and protocol, consult the documentation for the program or service you want to use.
Name:
FTP-TCP
Port number:
21
TCP
UDP
What are the risks of opening a port?
Change scope...
OK
Cancel

Now we need to open port 21 for UDP data also, so click on the “Add Port” button again

 © Canon 2006

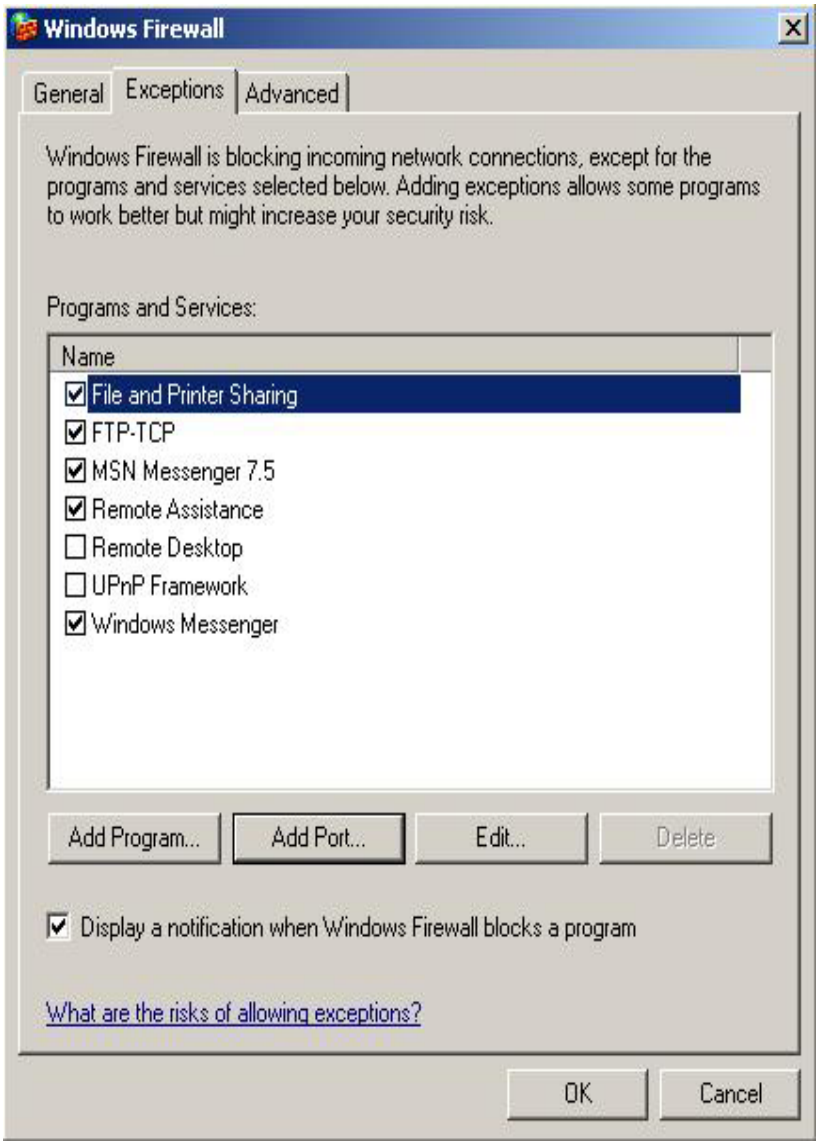

In the Add a Port screen, enter the name as FTP-UDP, and the port number as 21. Make sure UDP is selected. This will open a UDP connection on port 21through the firewall to enable data communication between the WFT-E1A and the FTP server. Click on OK

 © Canon 2006

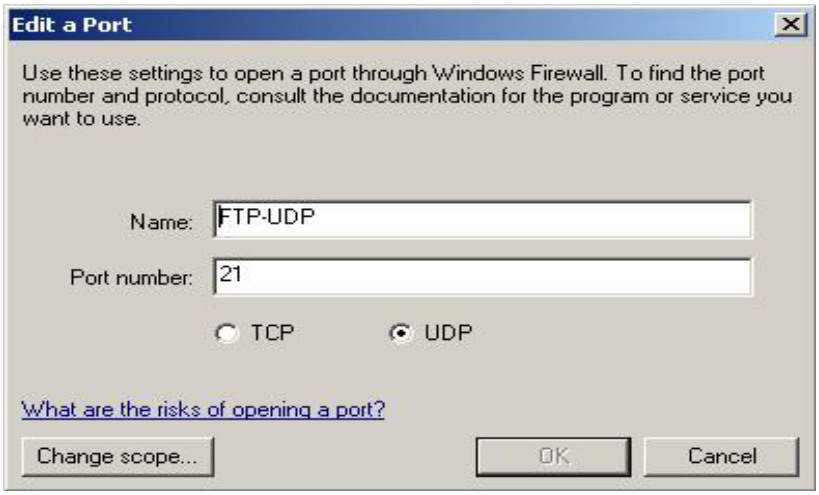
Edit a Port
Use these settings to open a port through Windows Firewall. To find the port number and protocol, consult the documentation for the program or service you want to use.
Name:
FTP-UDP
Port number:
21
TCP
UDP
What are the risks of opening a port?
Change scope...
OK
Cancel

 © Canon 2006

You should now have FTP-TCP and FTP-UDP entries in your Firewall Exceptions; port 21 is now open through your firewall. No settings on the Windows Firewall “Advanced” tab require any attention. Click OK.

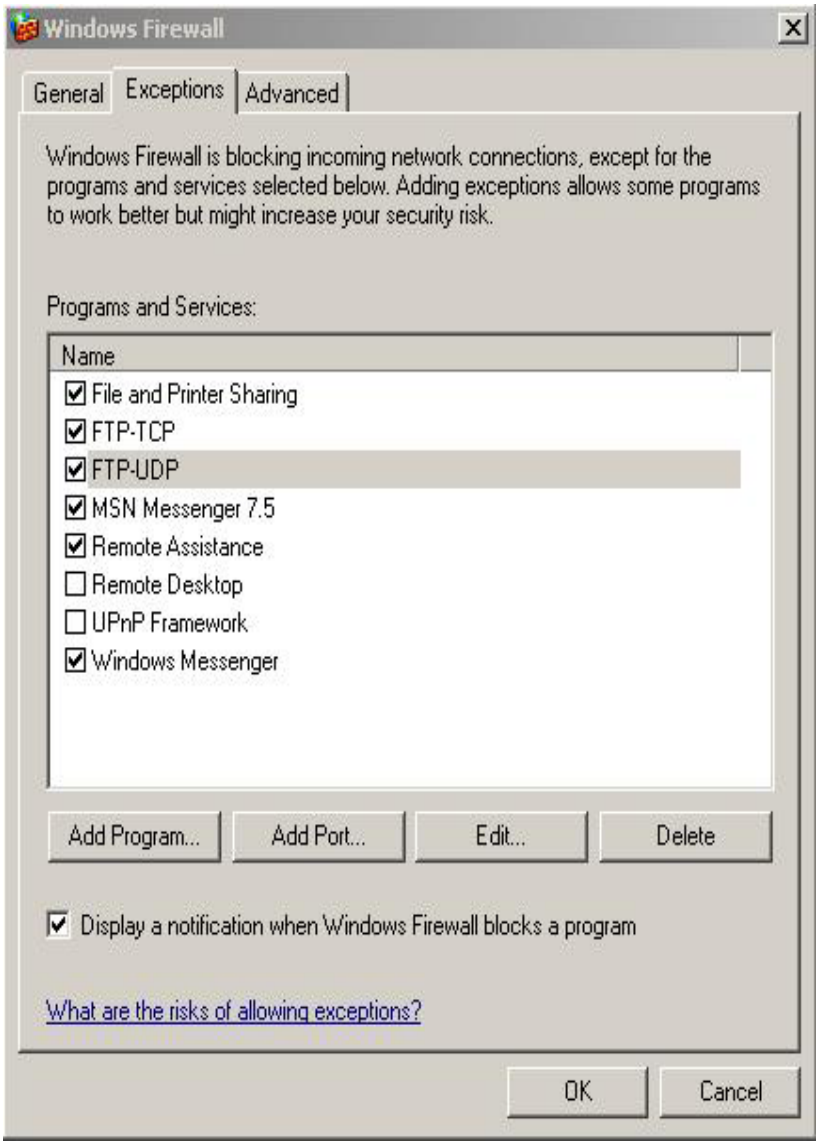

 © Canon 2006

You will now need to make sure your router is set up correctly. Here we will be setting up a the Belkin 4 port router, however the settings should be similar on other makes of router however you may need a different IP address to get to the access point's administration screen, so refer to your router's manual for this. The Belkin's administration screen is located at 192.168.2.1, so we will open an internet explorer window and type the IP address into the URL bar. You will need to login to your router (consult your router's manual for the username and password)

The only setting you need to ensure you have set up on this screen is DHCP server on, as this will issue an IP address to the WFT-E1A automatically from the available pool of addresses. **Once again, ensure that you have not set your computers IP address that is running the FTP server to fall within this range of addresses or a conflict will occur.**

If you have a hardware based firewall activated in your router, you must make sure port 21 is forwarded through this firewall or communications from the WFT-E1A will be blocked. Contact your router manufacturer for assistance with port forwarding if this is the case.

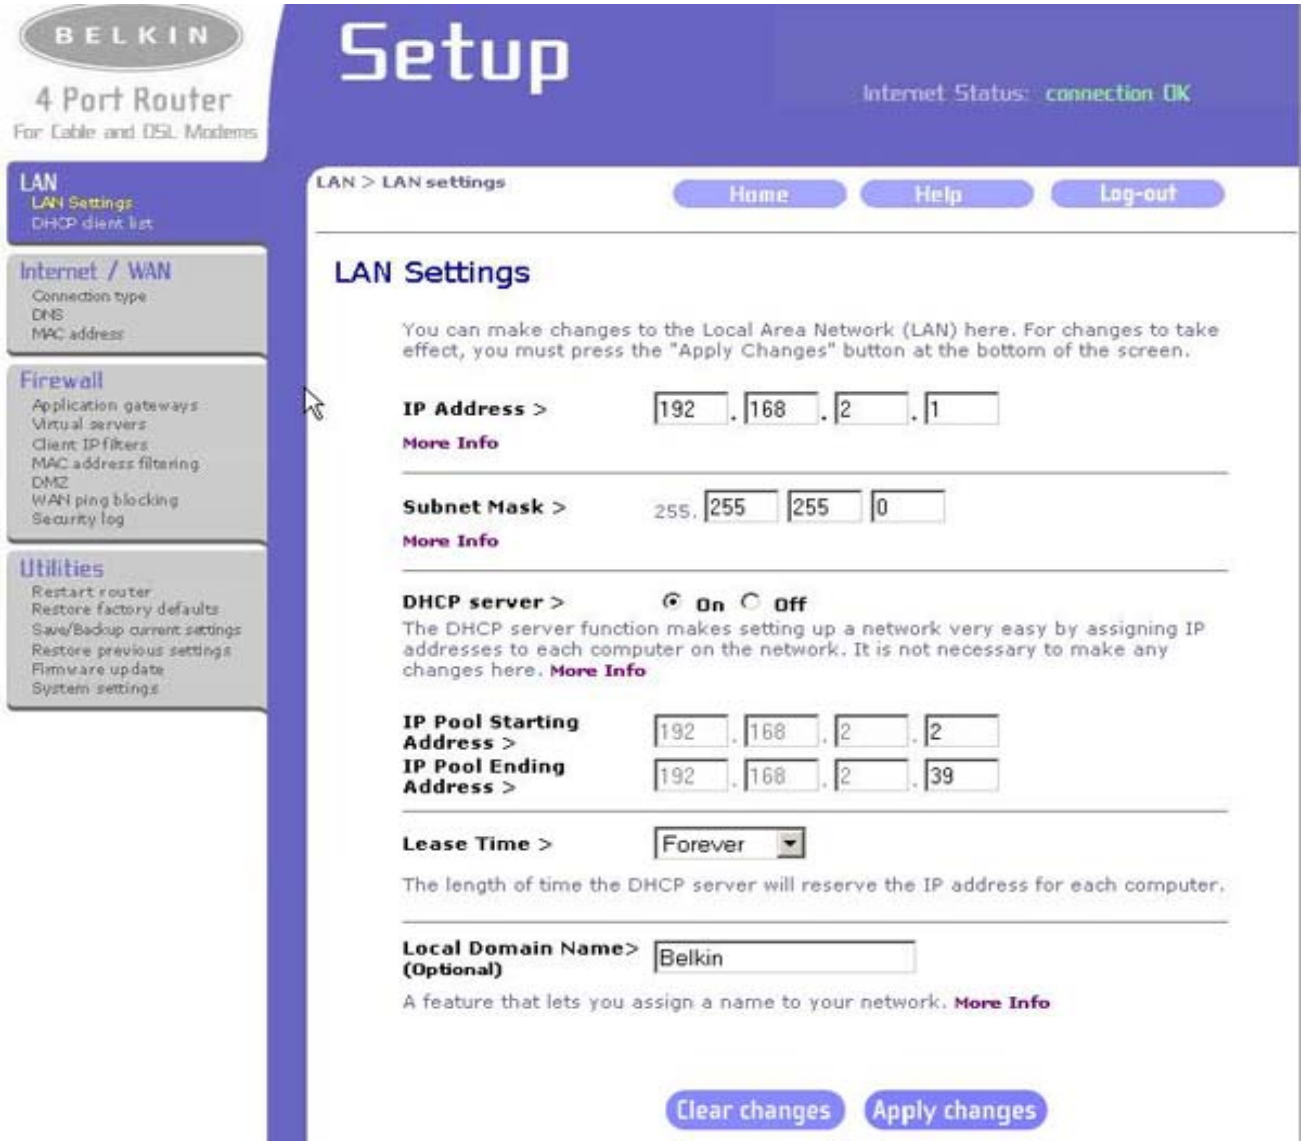
BELKIN
4 Port Router
For Cable and DSL Modems
Setup
Internet Status: connection OK
LAN
LAN Settings
DHCP client list
Internet / WAN
Connection type
DNS
MAC address
Firewall
Application gateways
Virtual servers
Client IP filters
MAC address filtering
DMZ
WAN ping blocking
Security log
Utilities
Restart router
Restore factory defaults
Save/Backup current settings
Restore previous settings
Firmware update
System settings
LAN > LAN settings
Home
Help
Log-out
LAN Settings
You can make changes to the Local Area Network (LAN) here. For changes to take effect, you must press the "Apply Changes" button at the bottom of the screen.
IP Address >
192 . 168 . 2 . 1
More Info
Subnet Mask >
255. 255 255 0
More Info
DHCP server >
On Off
The DHCP server function makes setting up a network very easy by assigning IP addresses to each computer on the network. It is not necessary to make any changes here. More Info
IP Pool Starting Address >
192 . 168 . 2 . 2
IP Pool Ending Address >
192 . 168 . 2 . 39
Lease Time >
Forever
The length of time the DHCP server will reserve the IP address for each computer.
Local Domain Name> (Optional)
Belkin
A feature that lets you assign a name to your network. More Info
Clear changes
Apply changes

 © Canon 2006

Stage 2

Setting up your FTP server on Windows XP Professional Edition

(For XP Home Edition proceed to Stage 2A – Filezilla FTP Server Setup instead)

Authored by Simon Adams Product Support Specialist Canon UK RCC

Revision 1.2 © Canon 2006

Setting up the FTP server on Windows XP Professional

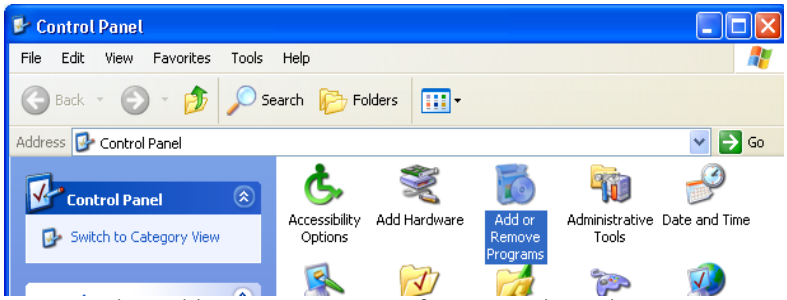

- Select Add/Remove programs from control panel
- You must be an administrator of the local machine for this to be possible. If not contact your local IT department and ask them to do it.

Select add/remove windows components then Windows Components Wizard displays

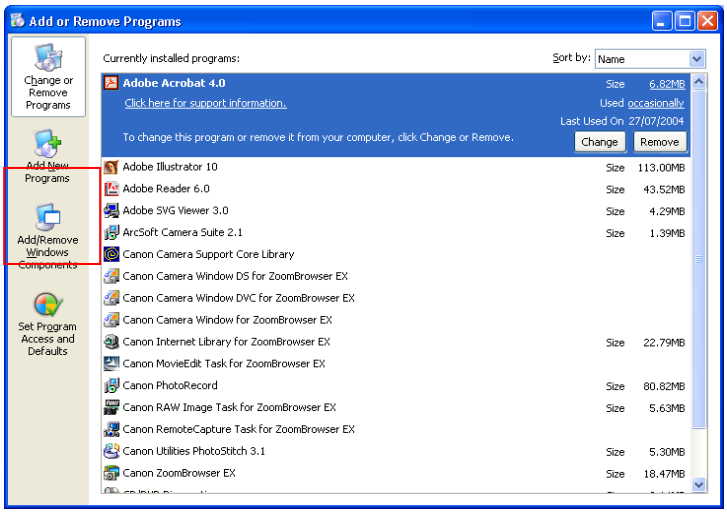
Add or Remove Programs
Change or Remove Programs
Add New Programs
Add/Remove Windows Components
Set Program Access and Defaults
Currently installed programs:
Sort by: Name
Adobe Acrobat 4.0
Size 6.82MB
Click here for support information.
Used occasionally
Last Used On 27/07/2004
To change this program or remove it from your computer, click Change or Remove.
Change
Remove
Adobe Illustrator 10 Size 113.00MB
Adobe Reader 6.0 Size 43.52MB
Adobe SVG Viewer 3.0 Size 4.29MB
ArcSoft Camera Suite 2.1 Size 1.39MB
Canon Camera Support Core Library
Canon Camera Window DS for ZoomBrowser EX
Canon Camera Window DVC for ZoomBrowser EX
Canon Camera Window for ZoomBrowser EX
Canon Internet Library for ZoomBrowser EX Size 22.79MB
Canon MovieEdit Task for ZoomBrowser EX
Canon PhotoRecord Size 80.82MB
Canon RAW Image Task for ZoomBrowser EX Size 5.63MB
Canon RemoteCapture Task for ZoomBrowser EX
Canon Utilities PhotoStitch 3.1 Size 5.30MB
Canon ZoomBrowser EX Size 18.47MB

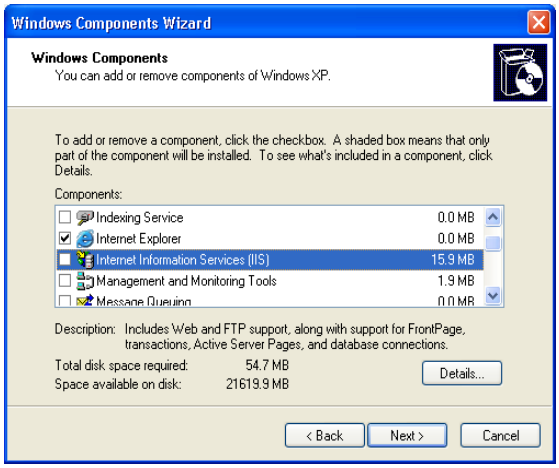
Windows Components Wizard
Windows Components
You can add or remove components of Windows XP.
To add or remove a component, click the checkbox. A shaded box means that only part of the component will be installed. To see what's included in a component, click Details.
Components:
Indexing Service 0.0 MB
Internet Explorer 0.0 MB
Internet Information Services (IIS) 15.9 MB
Management and Monitoring Tools 1.9 MB
Description: Includes Web and FTP support, along with support for FrontPage, transactions, Active Server Pages, and database connections.
Total disk space required: 54.7 MB
Space available on disk: 21619.9 MB
Details...
< Back
Next >
Cancel

 © Canon 2006

- Select the Internet Information Services option, and click Details...

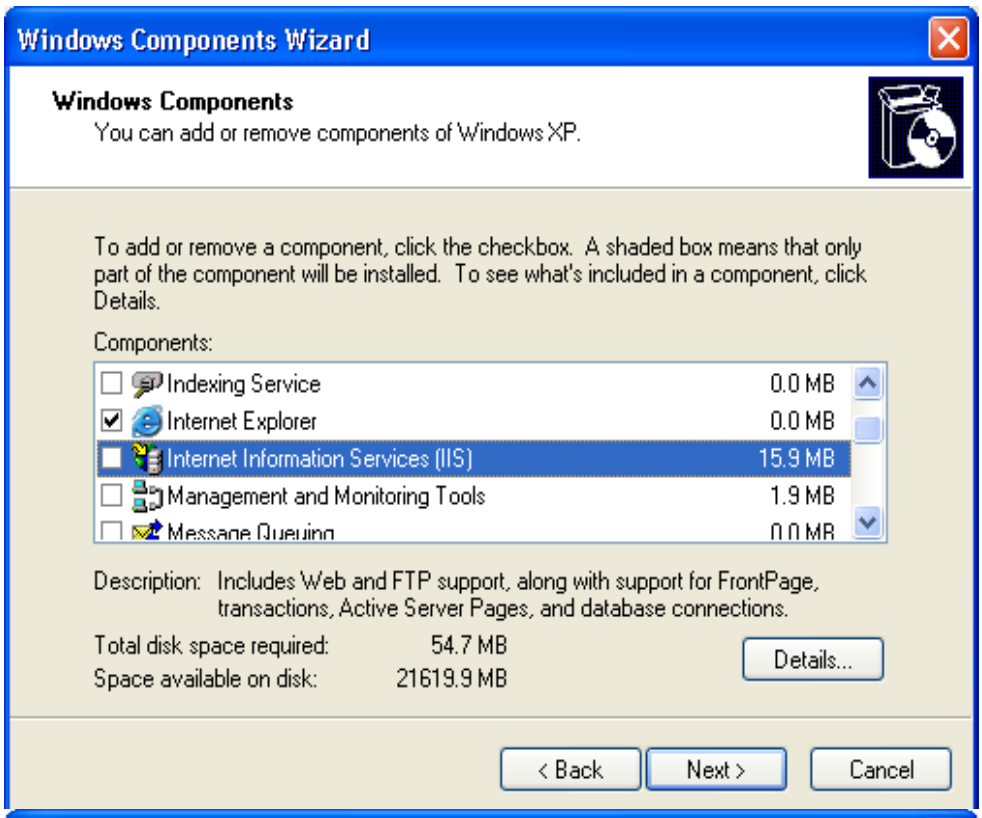
Windows Components Wizard
Windows Components
You can add or remove components of Windows XP.
To add or remove a component, click the checkbox. A shaded box means that only part of the component will be installed. To see what's included in a component, click Details.
Components:
Indexing Service 0.0 MB
Internet Explorer 0.0 MB
Internet Information Services (IIS) 15.9 MB
Management and Monitoring Tools 1.9 MB
Message Queuing 0.0 MB
Description: Includes Web and FTP support, along with support for FrontPage, transactions, Active Server Pages, and database connections.
Total disk space required: 54.7 MB
Space available on disk: 21619.9 MB
Details...
< Back
Next >
Cancel

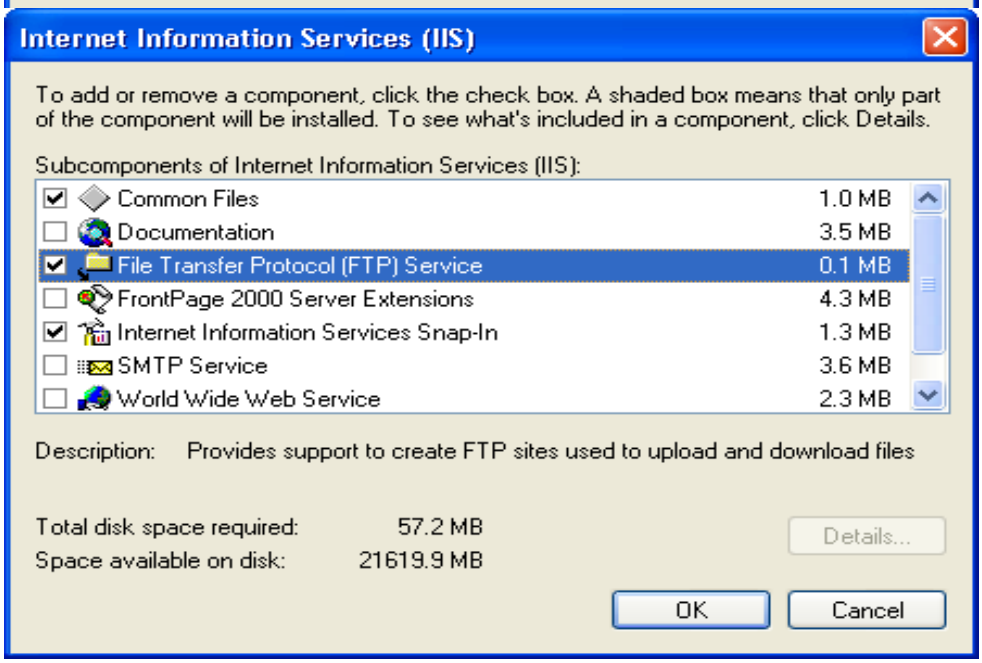
Internet Information Services (IIS)
To add or remove a component, click the check box. A shaded box means that only part of the component will be installed. To see what's included in a component, click Details.
Subcomponents of Internet Information Services (IIS):
Common Files 1.0 MB
Documentation 3.5 MB
File Transfer Protocol (FTP) Service 0.1 MB
FrontPage 2000 Server Extensions 4.3 MB
Internet Information Services Snap-In 1.3 MB
SMTP Service 3.6 MB
World Wide Web Service 2.3 MB
Description: Provides support to create FTP sites used to upload and download files
Total disk space required: 57.2 MB
Space available on disk: 21619.9 MB
Details...
OK
Cancel

 © Canon 2006

From control panel select Administrative Tools

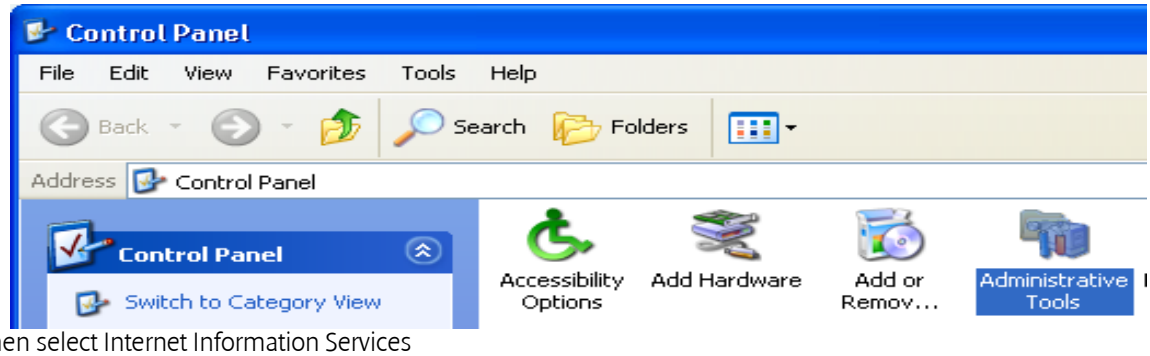

Then select Internet Information Services

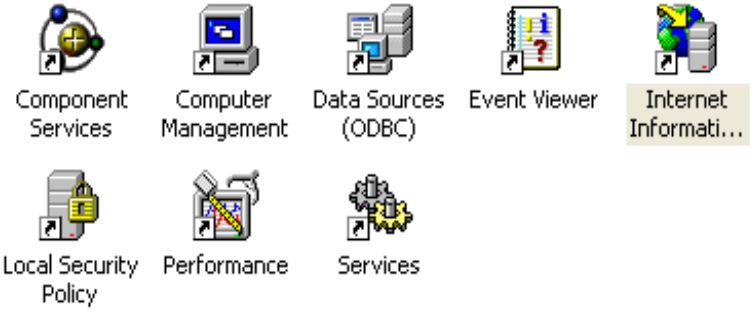

Right click and select properties on the Default FTP Site. If you wish you may rename this by right clicking on it and selecting rename.

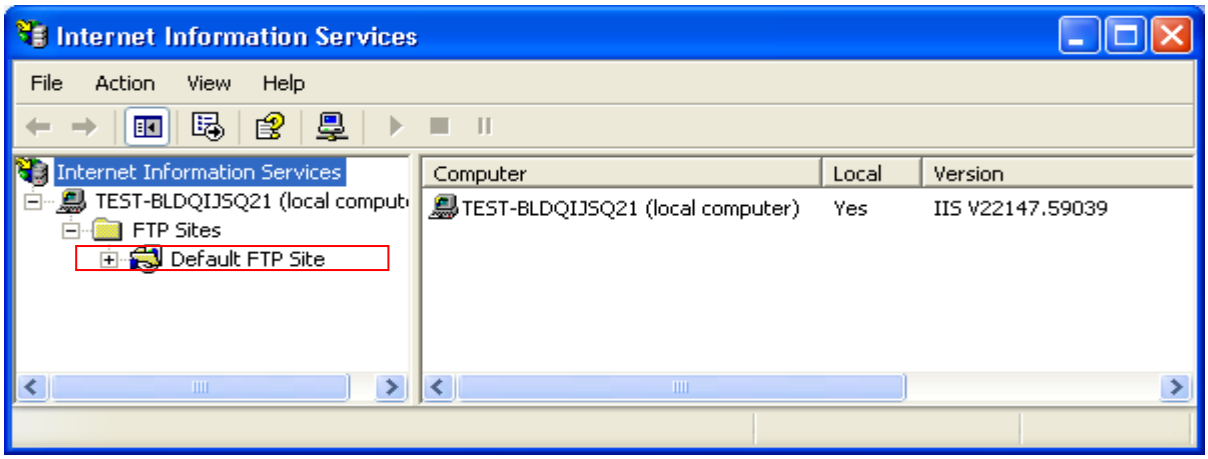

 © Canon 2006

Under the FTP Site Tab enter a description for the FTP server. Here we have used the name canon. Please note that this is case sensitive so input in lower case to avoid confusion.

In IP address, your computer's IP address should be available for selection, select this from its drop down menu. Ensure the port is set at port 21. Also ensure that "Enable Logging" is ticked to provide a log should you need to troubleshoot your setup at a later date.

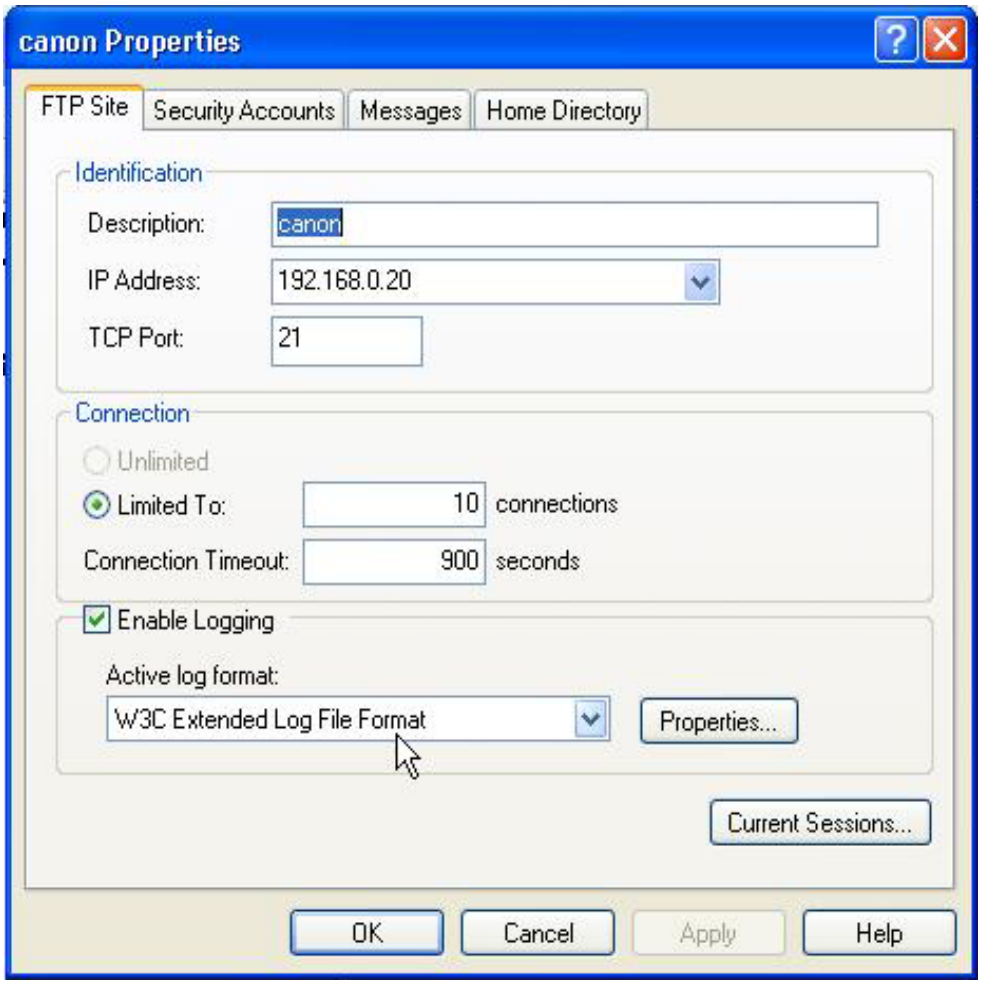

 © Canon 2006

Under the Security Accounts tab, you should tick Allow Anonymous connections, and leave the username as set by the Microsoft IIS FTP Server. This is usually in the format IUSR_ and then immediately followed by the name of the computer the server is running on. Make sure that Allow only anonymous connections and Allow IIS to control password are ticked.

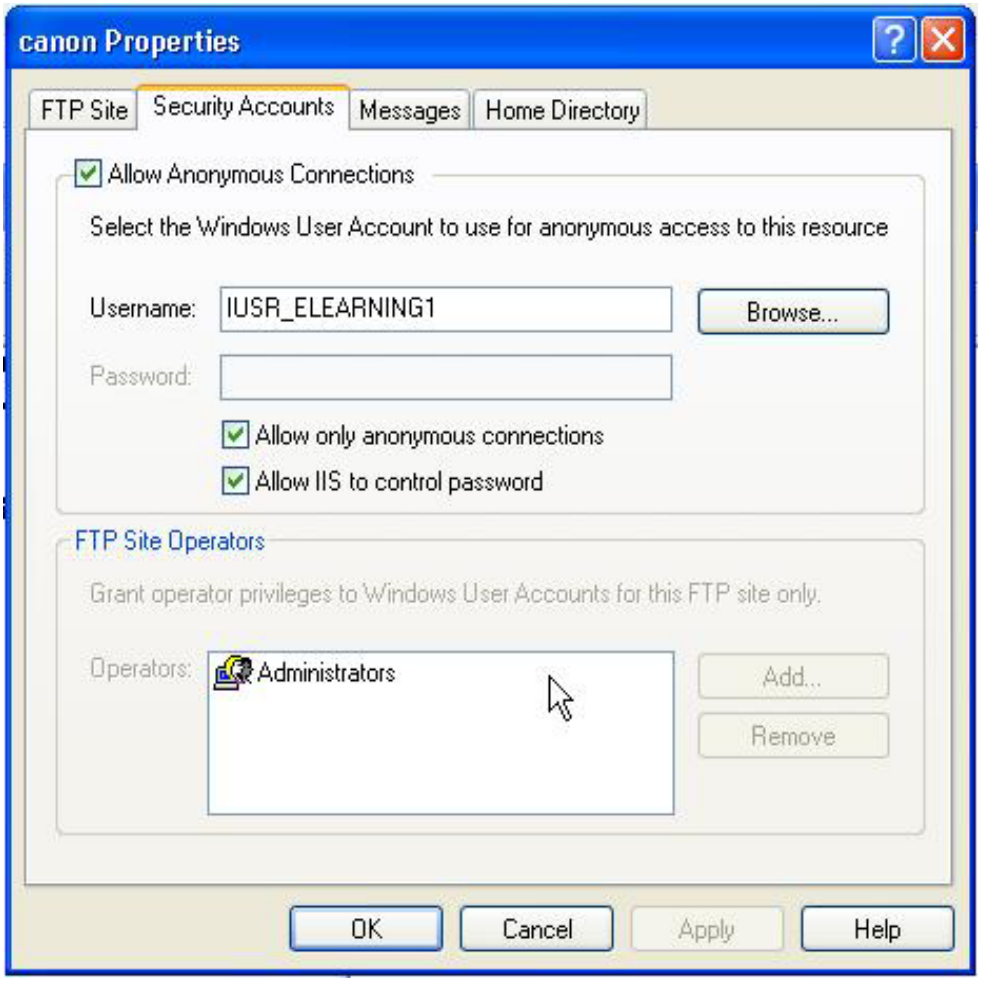

 © Canon 2006

Nothing is required on the messages tab, so proceed to the Home Directory page. The local path should be set to C:\Inetpub\ftproot as this is the area IIS uses for the FTP storage, and will be where the transmitted images are sent to. Ensure that Read / Write and Log Visits are all ticked.

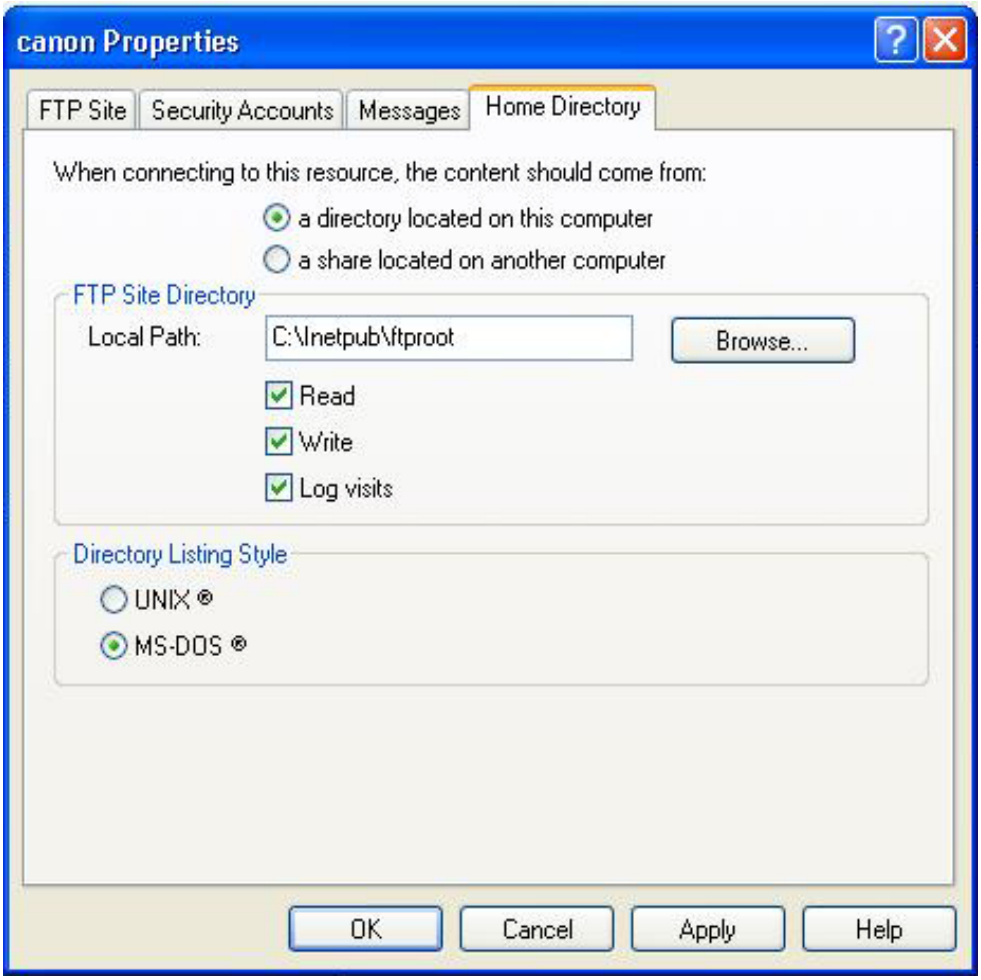

When setting up the WFT-E1 (A) username and password settings in Stage 3, you should use the username **anonymous** with **no password set.**

 © Canon 2006

Stage 2A

Setting up your FTP server on Windows XP Home Edition

(For XP Professional Edition see Stage 2 – IIS FTP Server Setup instead)

Authored by Simon Adams Product Support Specialist Canon UK RCC

Revision 1.2 © Canon 2006

Stage 2A – Setting up Filezilla FTP Server on your PC

Download and install Filezilla FTP Server from http://sourceforge.net/projects/filezilla/

This is a freeware application covered by the GNU General Public Licence, please read this to ensure you comply with the license terms, however please note that this program is not provided by Canon and Canon cannot be responsible for any losses howsoever arising from its use in any way. Customers use this program at their own risk, and Canon cannot be held liable for any losses that result from the settings that may be suggested in this guide.

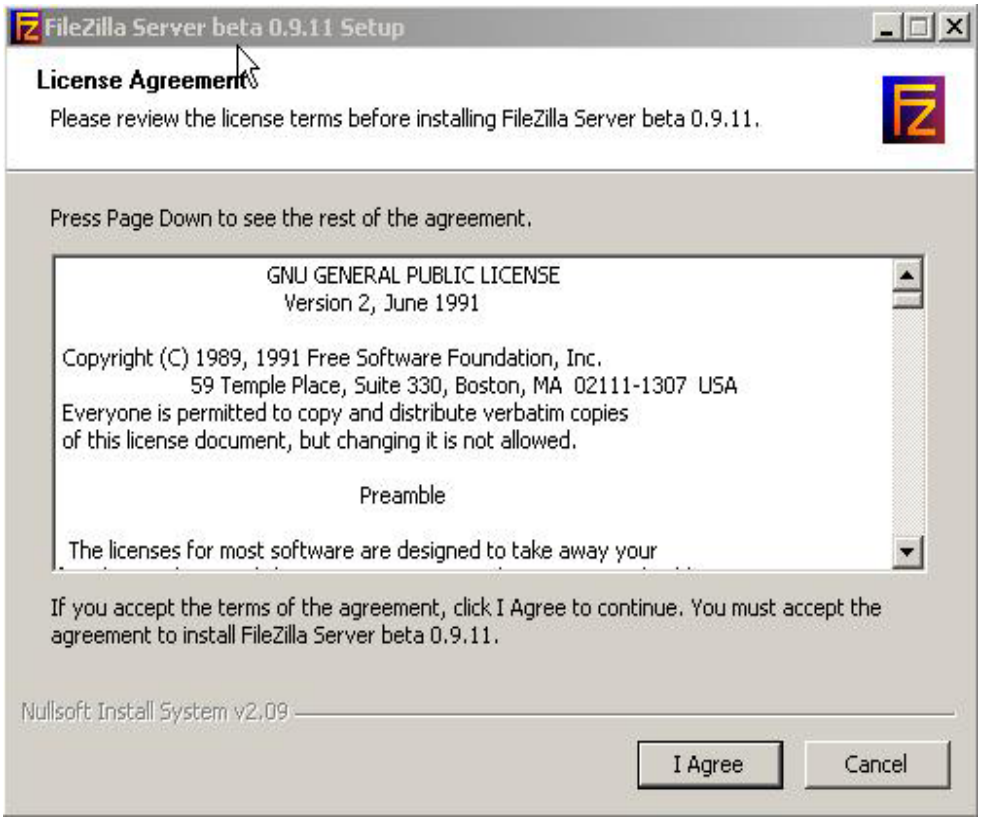
FileZilla Server beta 0.9.11 Setup
License Agreement
Please review the license terms before installing FileZilla Server beta 0.9.11.
Press Page Down to see the rest of the agreement.
GNU GENERAL PUBLIC LICENSE
Version 2, June 1991
Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.
Preamble
The licenses for most software are designed to take away your
If you accept the terms of the agreement, click I Agree to continue. You must accept the agreement to install FileZilla Server beta 0.9.11.
Nullsoft Install System v2.09
I Agree
Cancel

 © Canon 2006

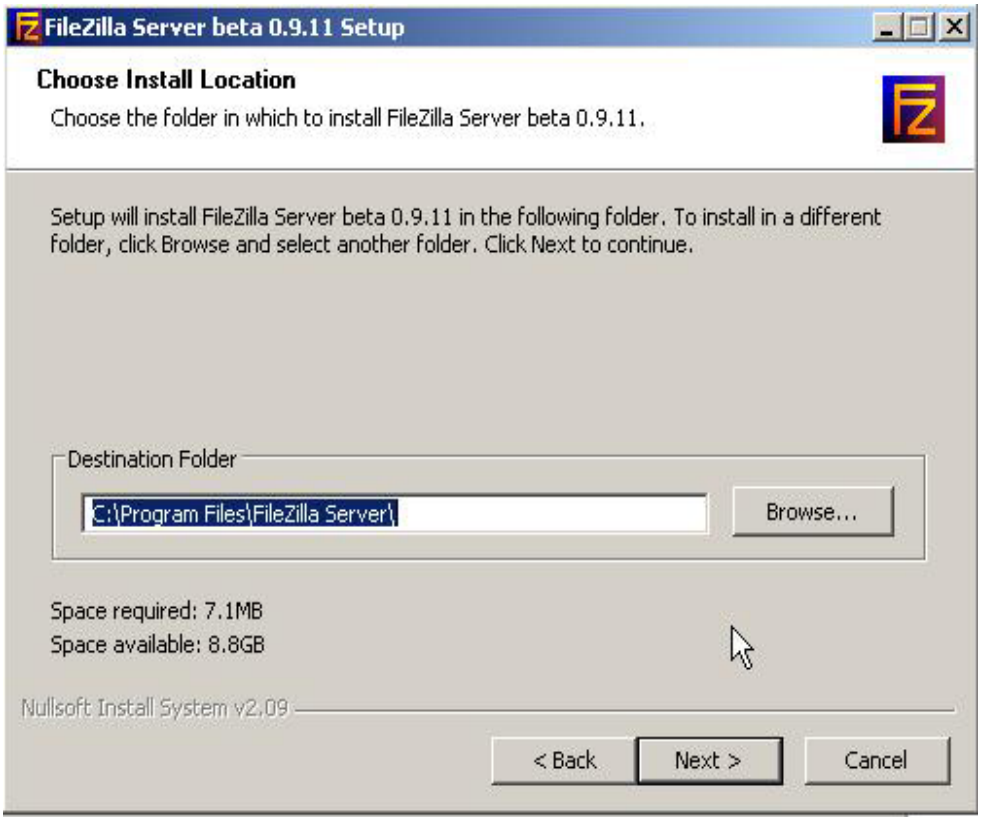
FileZilla Server beta 0.9.11 Setup
Choose Install Location
Choose the folder in which to install FileZilla Server beta 0.9.11.
Setup will install FileZilla Server beta 0.9.11 in the following folder. To install in a different folder, click Browse and select another folder. Click Next to continue.
Destination Folder
C:\Program Files\FileZilla Server\
Browse...
Space required: 7.1MB
Space available: 8.8GB
Nullsoft Install System v2.09
< Back
Next >
Cancel

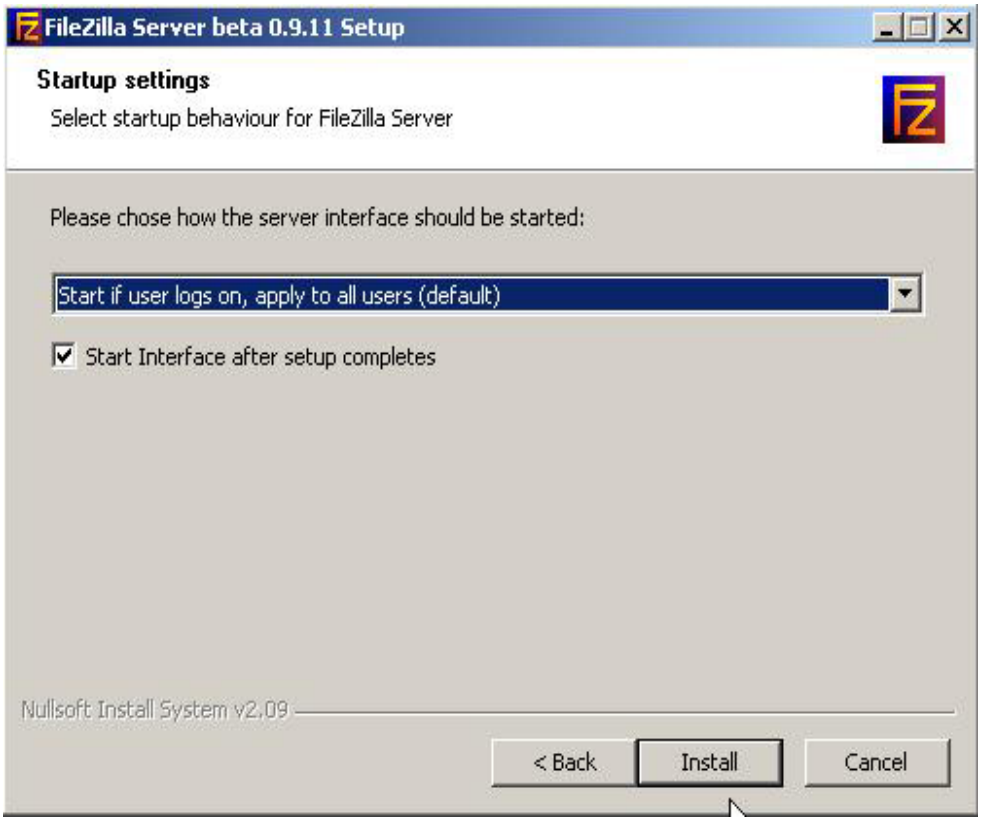
FileZilla Server beta 0.9.11 Setup
Startup settings
Select startup behaviour for FileZilla Server
Please chose how the server interface should be started:
Start if user logs on, apply to all users (default)
Start Interface after setup completes
Nullsoft Install System v2.09
< Back
Install
Cancel

 © Canon 2006

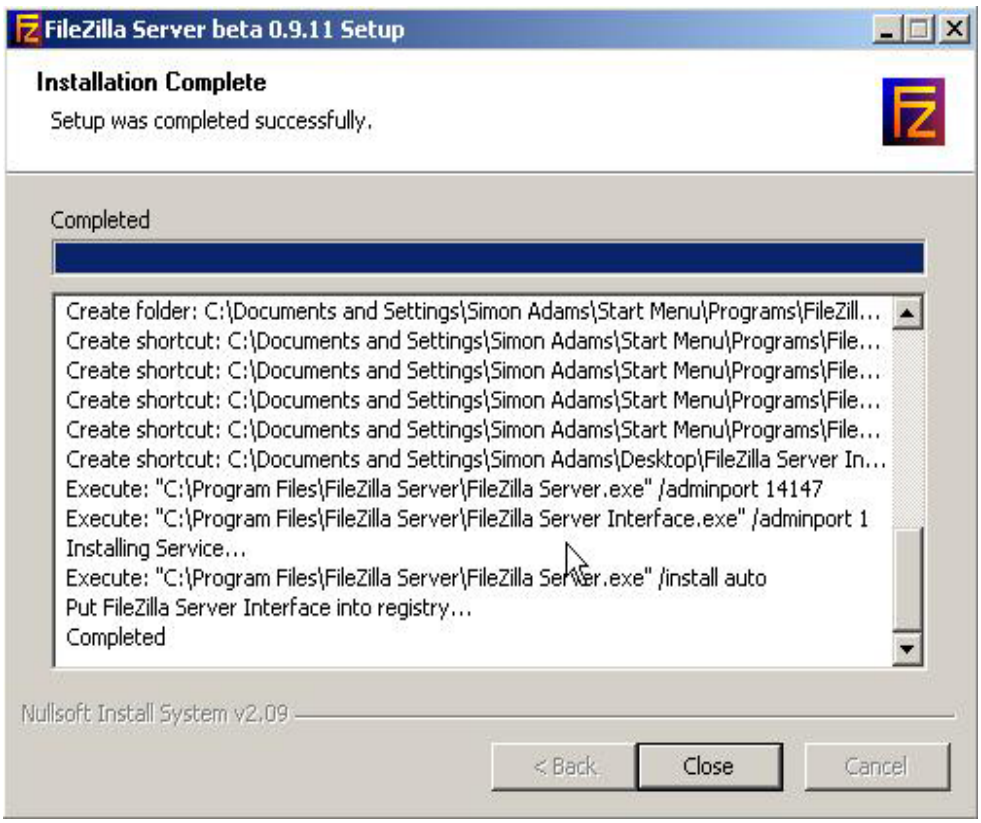
FileZilla Server beta 0.9.11 Setup
Installation Complete
Setup was completed successfully.
Completed
Create folder: C:\Documents and Settings\Simon Adams\Start Menu\Programs\FileZill...
Create shortcut: C:\Documents and Settings\Simon Adams\Start Menu\Programs\File...
Create shortcut: C:\Documents and Settings\Simon Adams\Start Menu\Programs\File...
Create shortcut: C:\Documents and Settings\Simon Adams\Start Menu\Programs\File...
Create shortcut: C:\Documents and Settings\Simon Adams\Start Menu\Programs\File...
Create shortcut: C:\Documents and Settings\Simon Adams\Desktop\FileZilla Server In...
Execute: "C:\Program Files\FileZilla Server\FileZilla Server.exe" /adminport 14147
Execute: "C:\Program Files\FileZilla Server\FileZilla Server Interface.exe" /adminport 1
Installing Service...
Execute: "C:\Program Files\FileZilla Server\FileZilla Server.exe" /install auto
Put FileZilla Server Interface into registry...
Completed
Nullsoft Install System v2.09
< Back
Close
Cancel

Connect to Server
Server Address:
Port:
127.0.0.1
14147
If the server address is not 127.0.0.1, you have to specify the server password:
Always connect to this server
OK
Cancel

 © Canon 2006

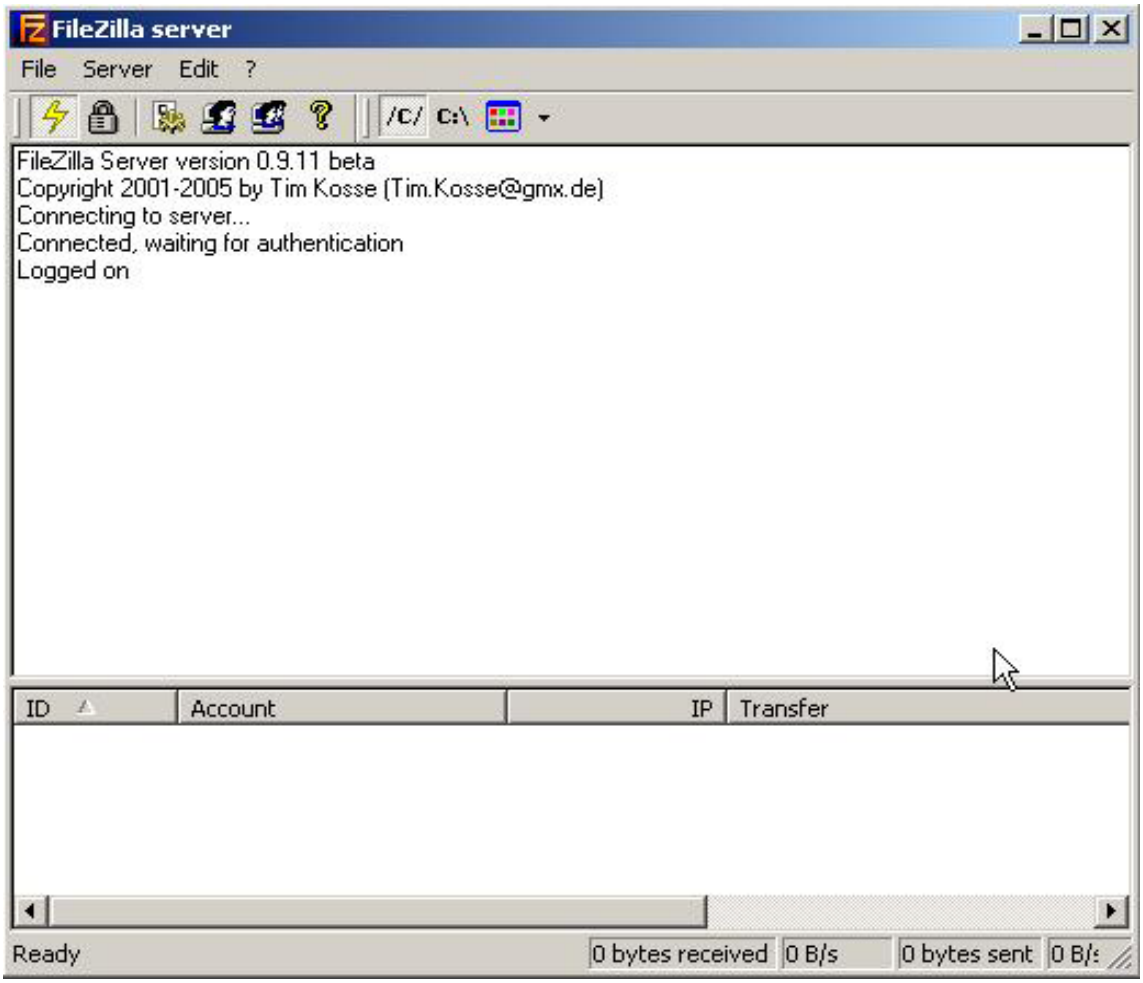
FileZilla server
File Server Edit ?
/C/ C:\
FileZilla Server version 0.9.11 beta
Copyright 2001-2005 by Tim Kosse (Tim.Kosse@gmx.de)
Connecting to server...
Connected, waiting for authentication
Logged on
ID
Account
IP
Transfer
Ready
0 bytes received
0 B/s
0 bytes sent
0 B/s

 © Canon 2006

Once you have Filezilla FTP Server installed, you'll need to configure the properties of the server so that it can communicate through the computer and to the outside world correctly. Click Edit, Settings to do this. And copy the settings from the screenshots. The fields should be similar in other FTP server programs, and the same setting should be used regardless of the FTP server program used. Timeout settings should be set to 0 so no timeout takes place or the WFT-E1A will be logged out if idle.

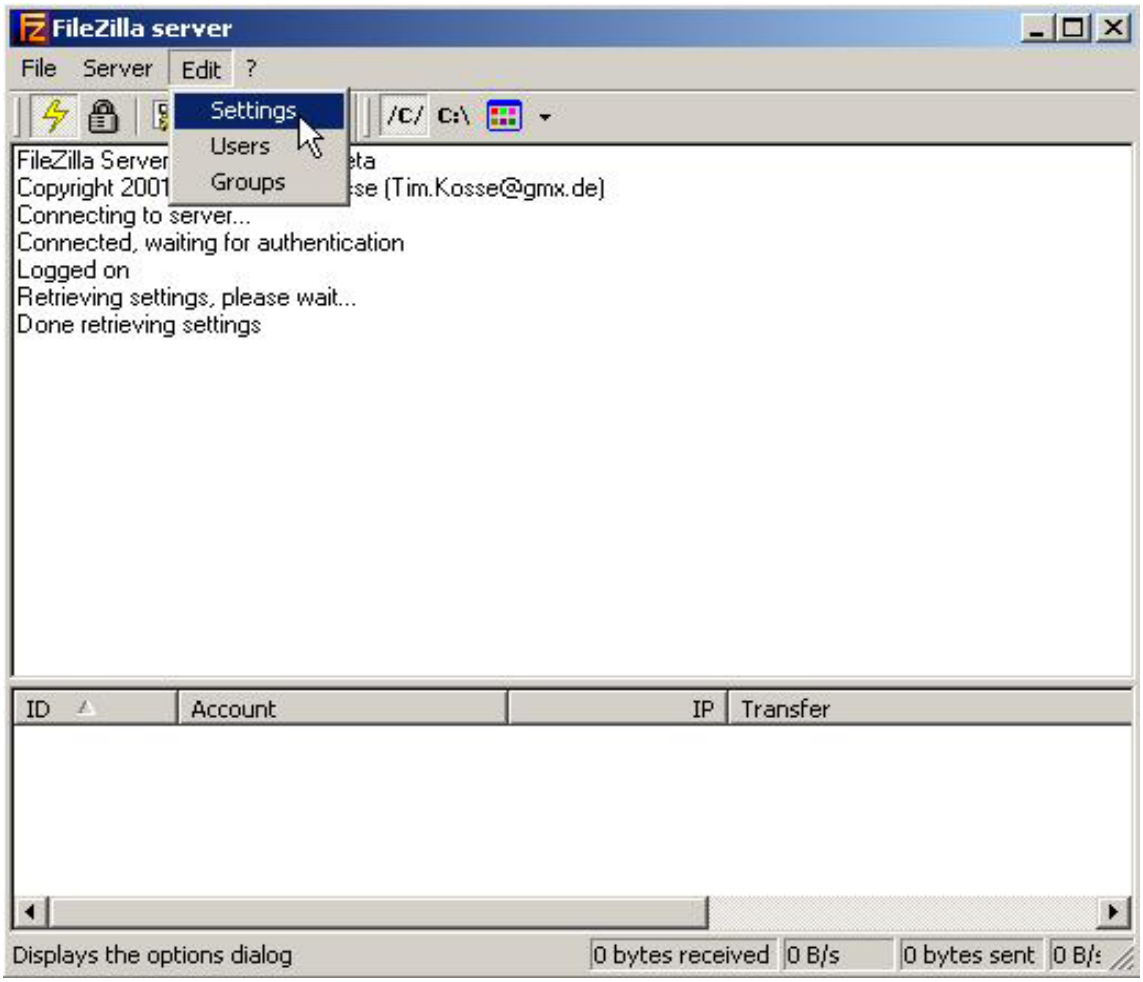

 © Canon 2006

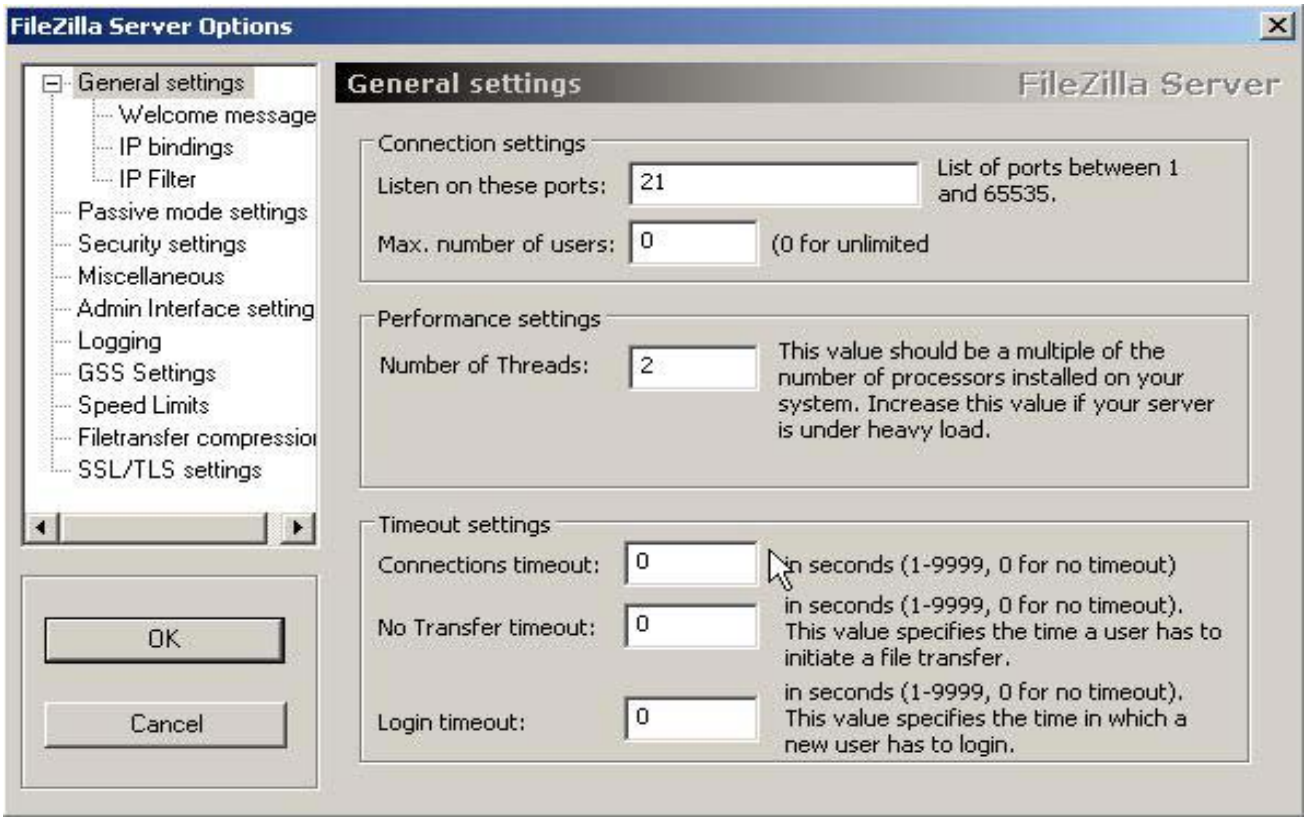
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
General settings
FileZilla Server
Connection settings
Listen on these ports: 21
List of ports between 1 and 65535.
Max. number of users: 0
(0 for unlimited
Performance settings
Number of Threads: 2
This value should be a multiple of the number of processors installed on your system. Increase this value if your server is under heavy load.
Timeout settings
Connections timeout: 0
in seconds (1-9999, 0 for no timeout)
No Transfer timeout: 0
in seconds (1-9999, 0 for no timeout). This value specifies the time a user has to initiate a file transfer.
Login timeout: 0
in seconds (1-9999, 0 for no timeout). This value specifies the time in which a new user has to login.
OK
Cancel

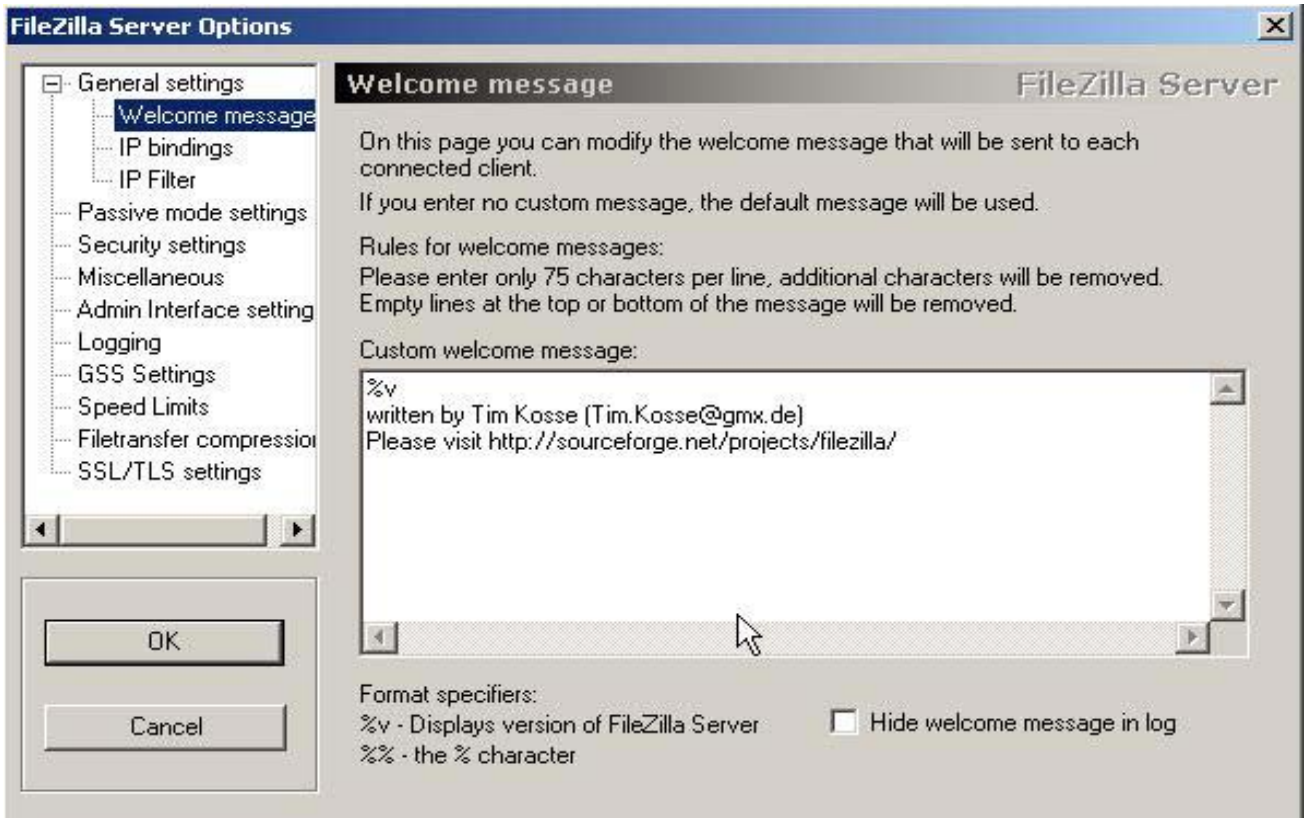
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Welcome message
FileZilla Server
On this page you can modify the welcome message that will be sent to each connected client.
If you enter no custom message, the default message will be used.
Rules for welcome messages:
Please enter only 75 characters per line, additional characters will be removed.
Empty lines at the top or bottom of the message will be removed.
Custom welcome message:
%v
written by Tim Kosse (Tim.Kosse@gmx.de)
Please visit http://sourceforge.net/projects/filezilla/
Format specifiers:
%v - Displays version of FileZilla Server
%% - the % character
Hide welcome message in log
OK
Cancel

 © Canon 2006

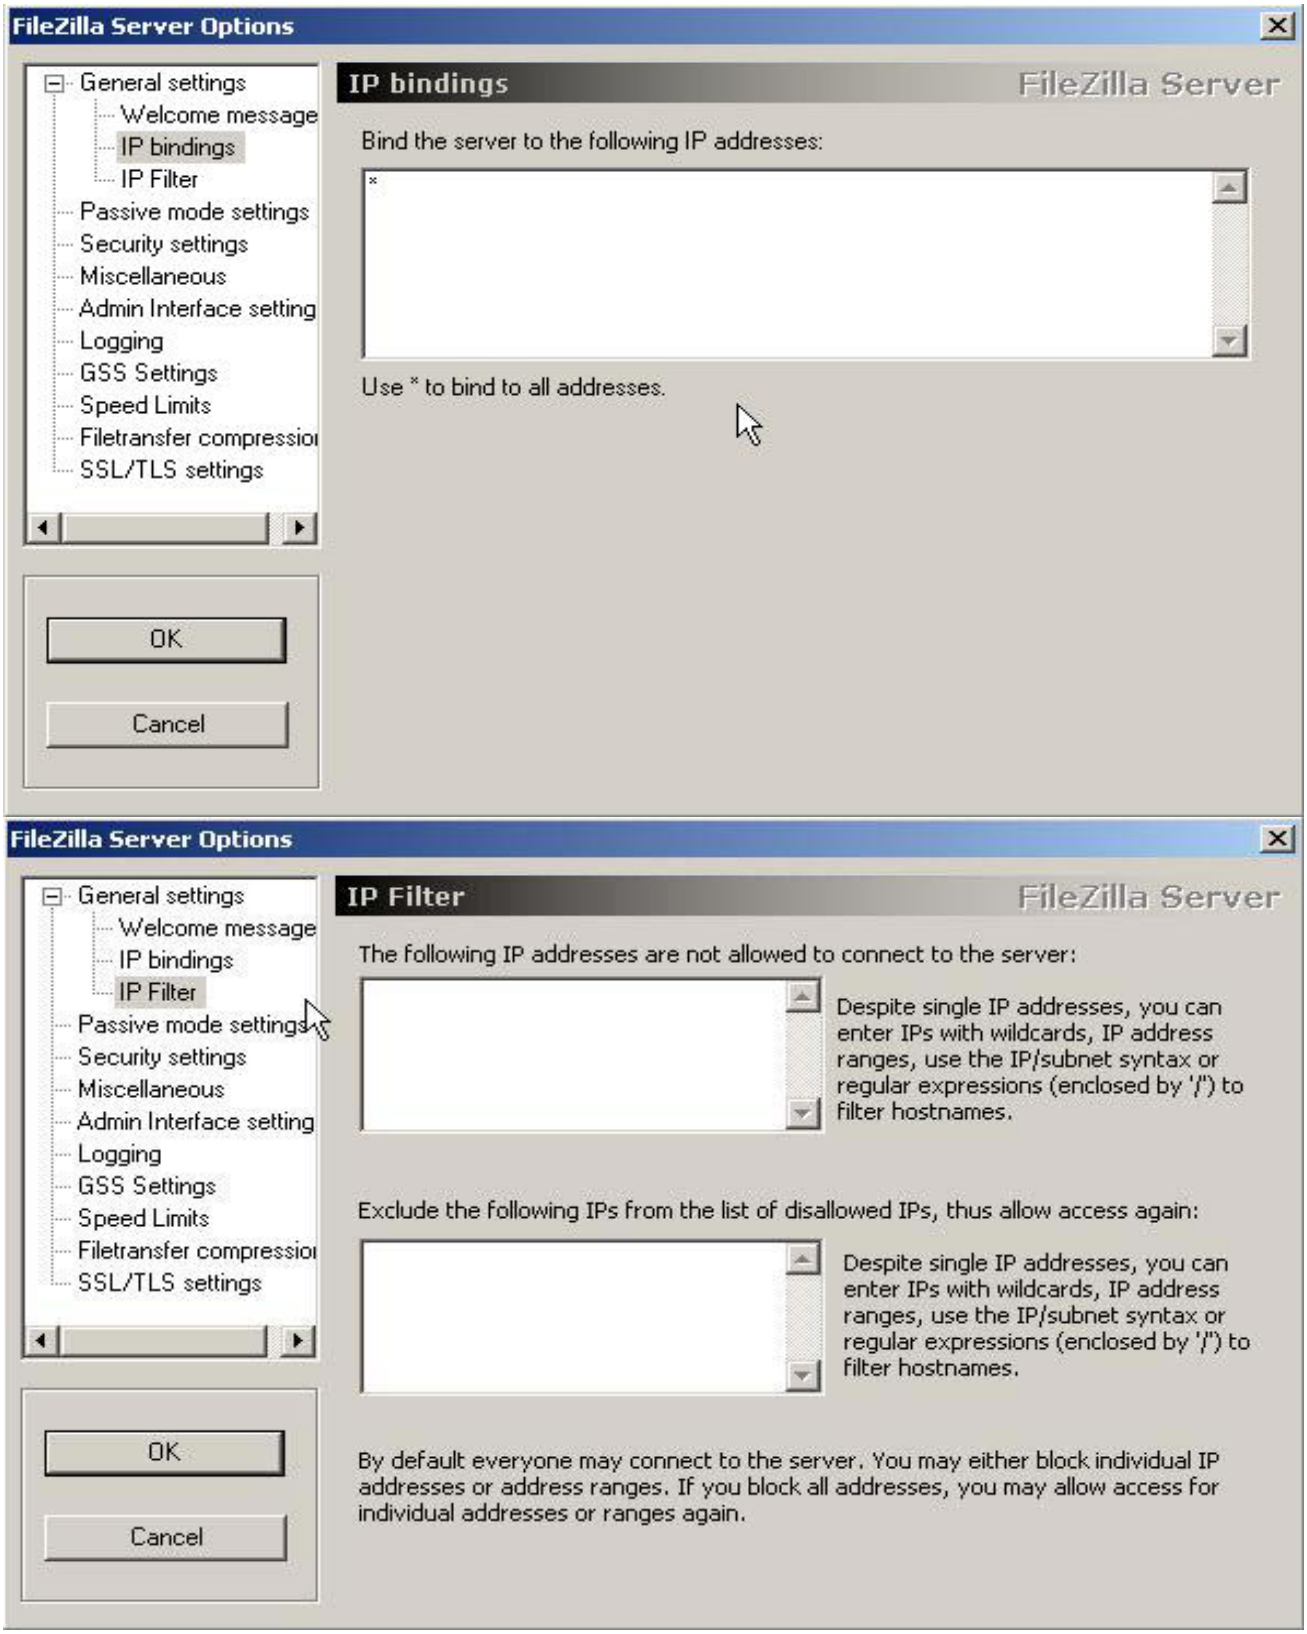
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
IP bindings
FileZilla Server
Bind the server to the following IP addresses:
*
Use * to bind to all addresses.
OK
Cancel
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
IP Filter
FileZilla Server
The following IP addresses are not allowed to connect to the server:
Despite single IP addresses, you can enter IPs with wildcards, IP address ranges, use the IP/subnet syntax or regular expressions (enclosed by '/') to filter hostnames.
Exclude the following IPs from the list of disallowed IPs, thus allow access again:
Despite single IP addresses, you can enter IPs with wildcards, IP address ranges, use the IP/subnet syntax or regular expressions (enclosed by '/') to filter hostnames.
By default everyone may connect to the server. You may either block individual IP addresses or address ranges. If you block all addresses, you may allow access for individual addresses or ranges again.
OK
Cancel

 © Canon 2006

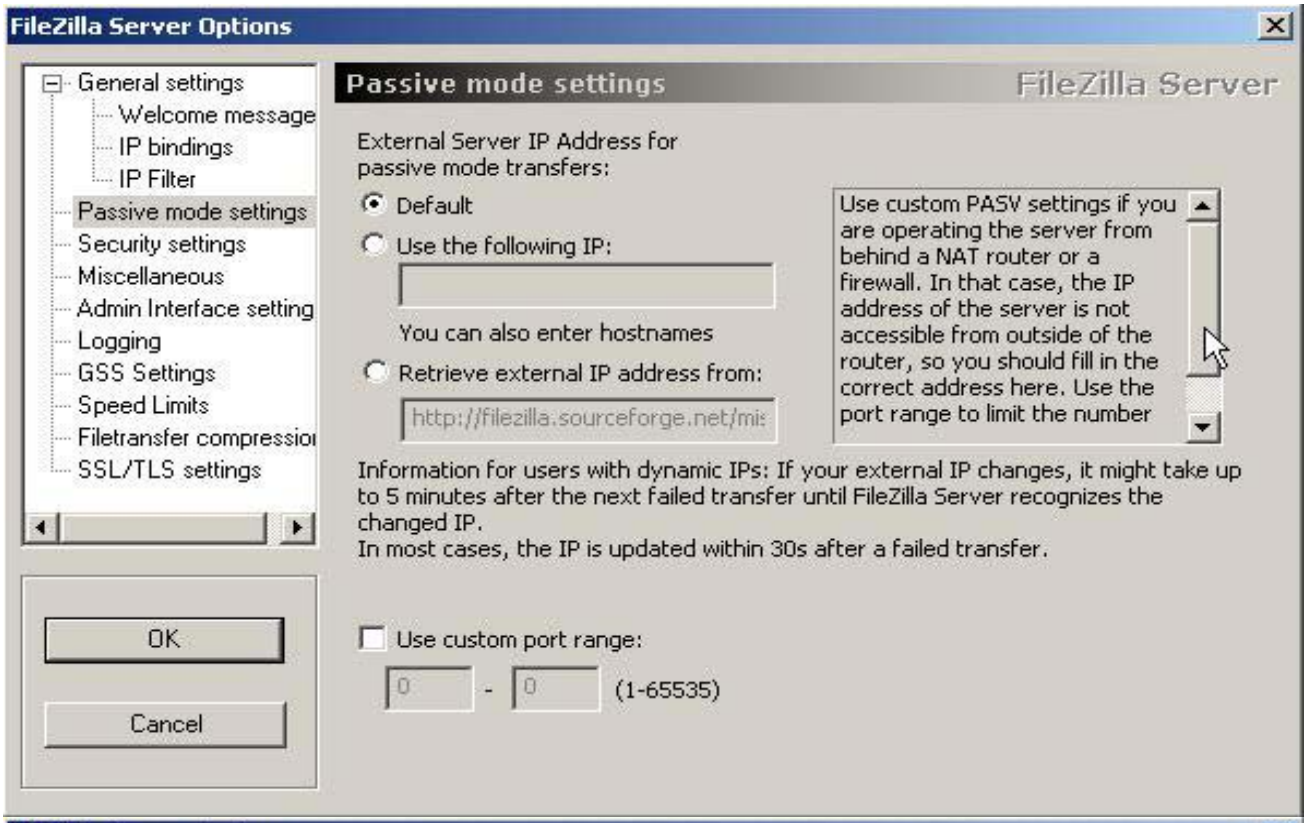
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Passive mode settings
FileZilla Server
External Server IP Address for passive mode transfers:
Default
Use the following IP:
You can also enter hostnames
Retrieve external IP address from:
http://filezilla.sourceforge.net/mi
Use custom PASV settings if you are operating the server from behind a NAT router or a firewall. In that case, the IP address of the server is not accessible from outside of the router, so you should fill in the correct address here. Use the port range to limit the number
Information for users with dynamic IPs: If your external IP changes, it might take up to 5 minutes after the next failed transfer until FileZilla Server recognizes the changed IP.
In most cases, the IP is updated within 30s after a failed transfer.
Use custom port range:
0 - 0 (1-65535)
OK
Cancel

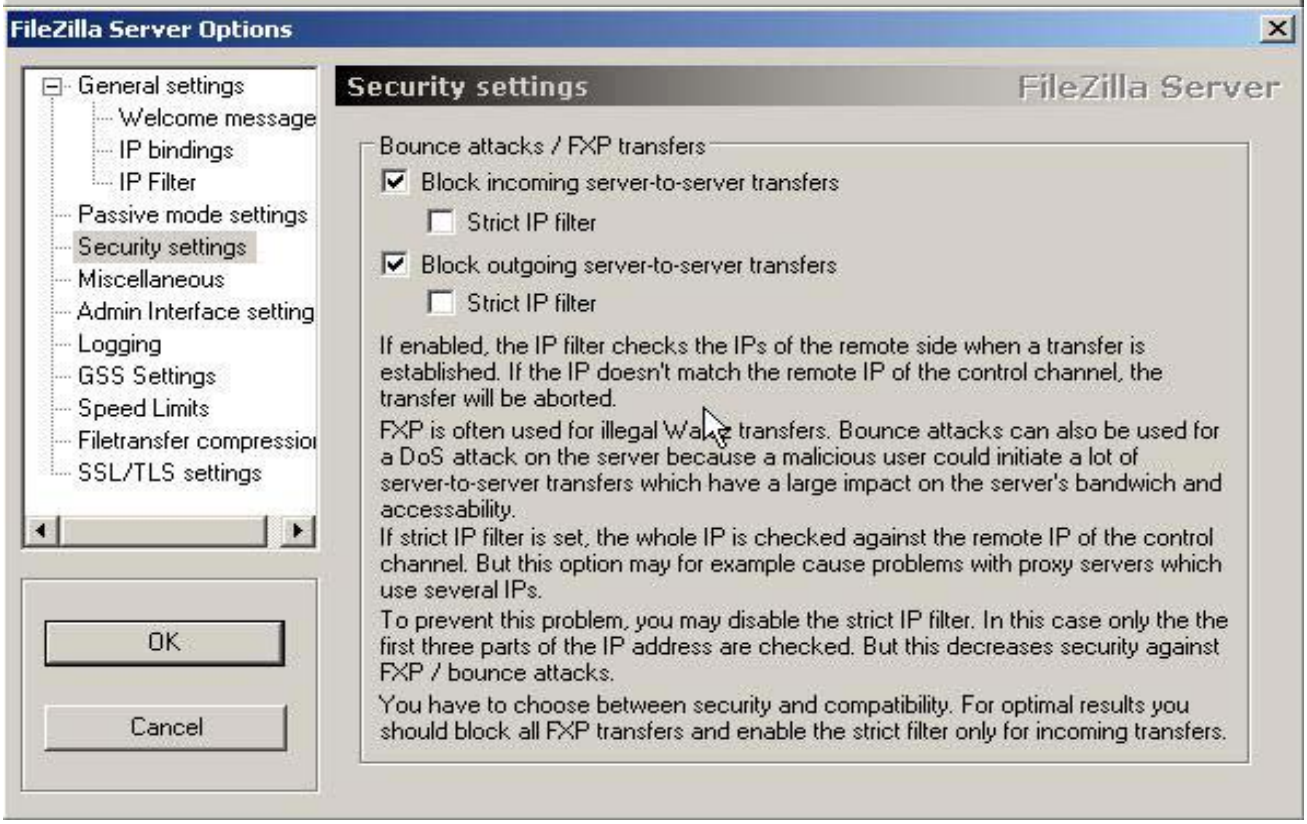
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Security settings
FileZilla Server
Bounce attacks / FXP transfers
Block incoming server-to-server transfers
Strict IP filter
Block outgoing server-to-server transfers
Strict IP filter
If enabled, the IP filter checks the IPs of the remote side when a transfer is established. If the IP doesn't match the remote IP of the control channel, the transfer will be aborted.
FXP is often used for illegal Wa transfers. Bounce attacks can also be used for a DoS attack on the server because a malicious user could initiate a lot of server-to-server transfers which have a large impact on the server's bandwich and accessability.
If strict IP filter is set, the whole IP is checked against the remote IP of the control channel. But this option may for example cause problems with proxy servers which use several IPs.
To prevent this problem, you may disable the strict IP filter. In this case only the the first three parts of the IP address are checked. But this decreases security against FXP / bounce attacks.
You have to choose between security and compatibility. For optimal results you should block all FXP transfers and enable the strict filter only for incoming transfers.
OK
Cancel

 © Canon 2006

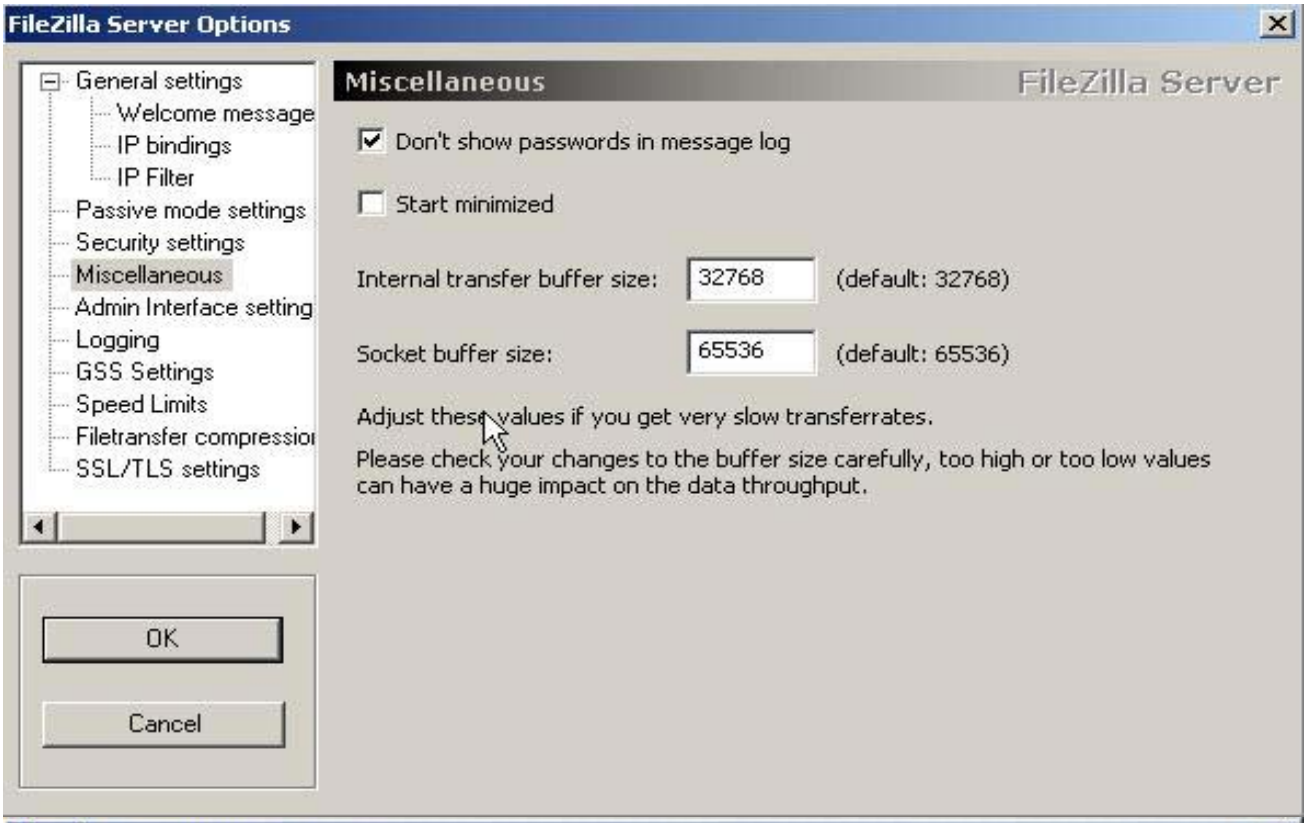
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Miscellaneous
FileZilla Server
Don't show passwords in message log
Start minimized
Internal transfer buffer size: 32768 (default: 32768)
Socket buffer size: 65536 (default: 65536)
Adjust these values if you get very slow transferrates.
Please check your changes to the buffer size carefully, too high or too low values can have a huge impact on the data throughput.
OK
Cancel

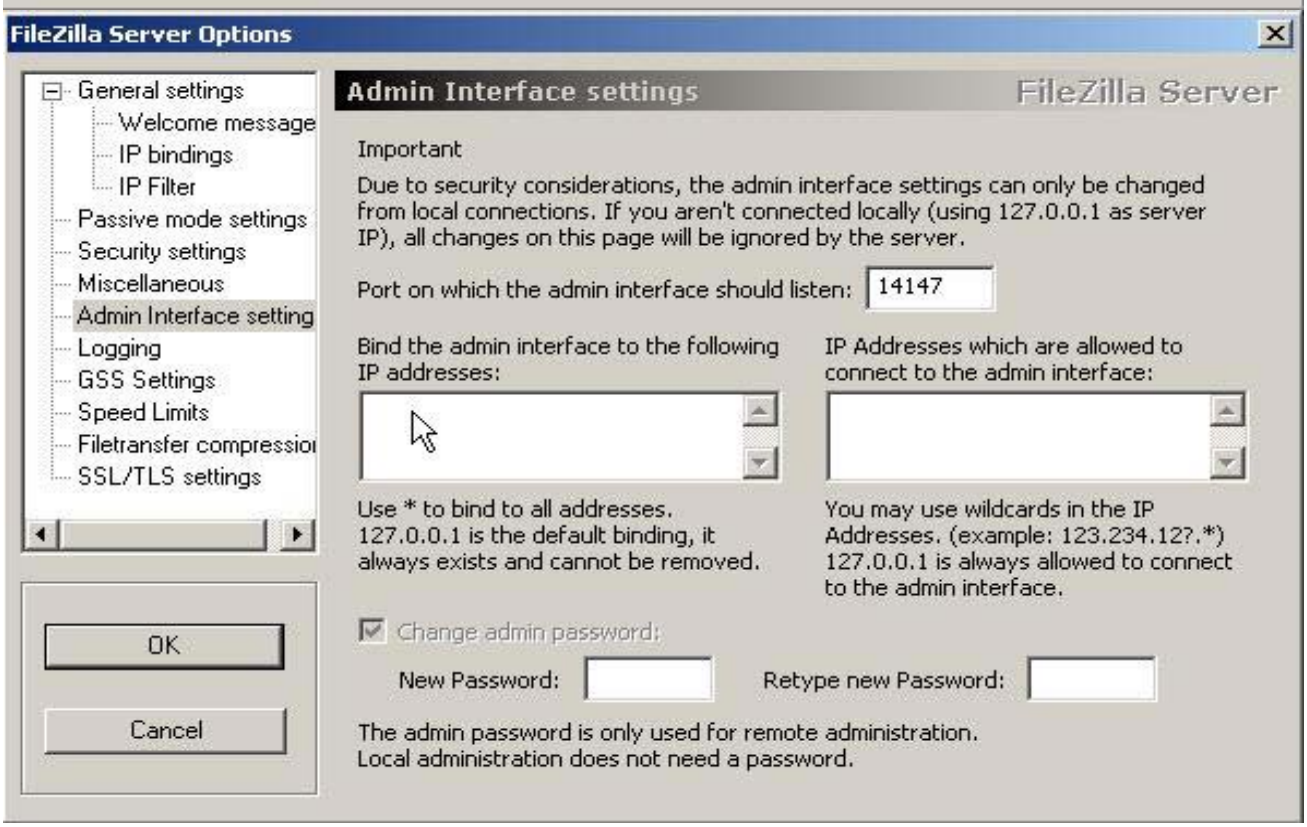
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Admin Interface settings
FileZilla Server
Important
Due to security considerations, the admin interface settings can only be changed from local connections. If you aren't connected locally (using 127.0.0.1 as server IP), all changes on this page will be ignored by the server.
Port on which the admin interface should listen: 14147
Bind the admin interface to the following IP addresses:
IP Addresses which are allowed to connect to the admin interface:
Use * to bind to all addresses.
127.0.0.1 is the default binding, it always exists and cannot be removed.
You may use wildcards in the IP Addresses. (example: 123.234.12?.*)
127.0.0.1 is always allowed to connect to the admin interface.
Change admin password:
New Password:
Retype new Password:
The admin password is only used for remote administration.
Local administration does not need a password.
OK
Cancel

 © Canon 2006

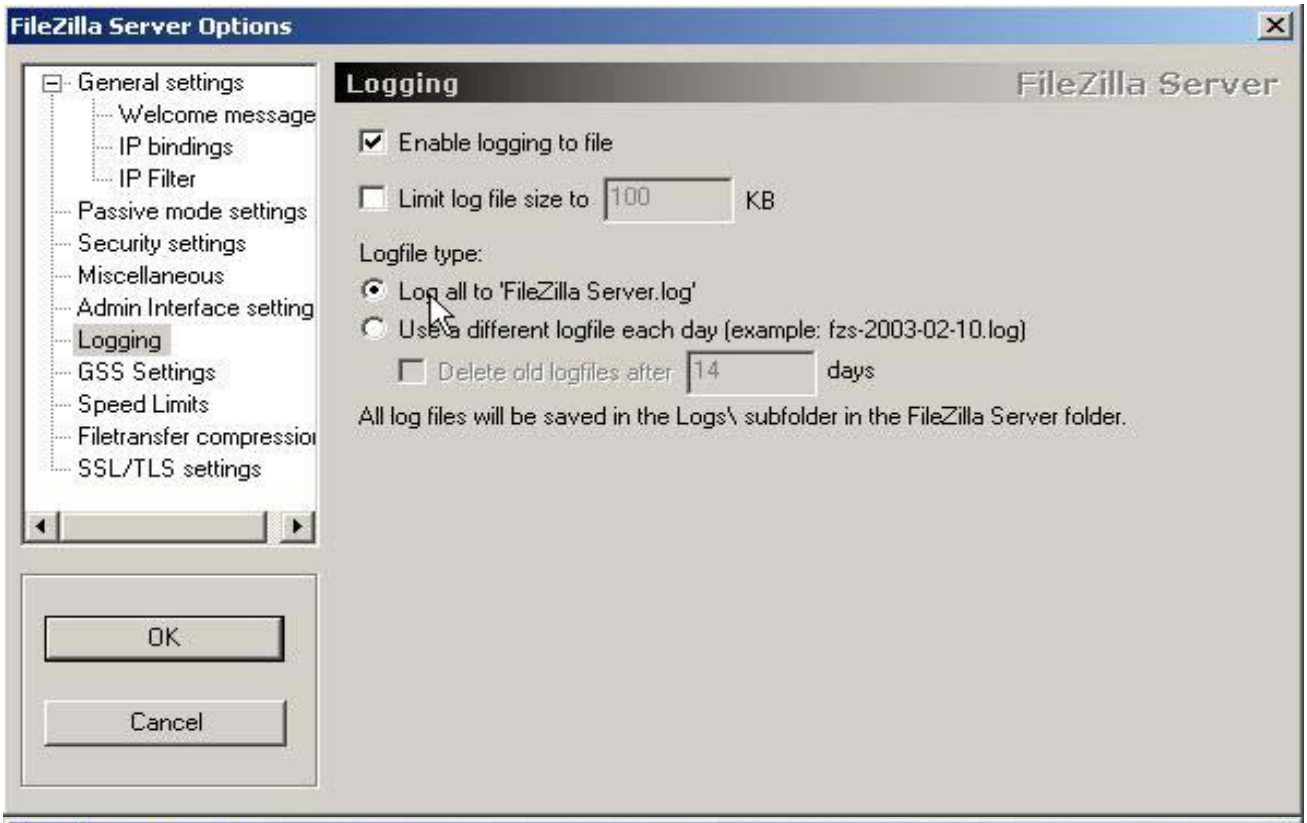
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Logging
FileZilla Server
Enable logging to file
Limit log file size to 100 KB
Logfile type:
Log all to 'FileZilla Server.log'
Use a different logfile each day (example: fzs-2003-02-10.log)
Delete old logfiles after 14 days
All log files will be saved in the Logs\ subfolder in the FileZilla Server folder.
OK
Cancel

FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
GSS Settings
FileZilla Server
Enable Kerberos GSS support
Prompt for password if necessary
It's recommended to use Kerberos for Windows 2.2 beta 2 or later.
If used with Kerberos for Windows 2.1, it is very likely that FileZilla Server will crash if a user authenticates.
OK
Cancel

 © Canon 2006

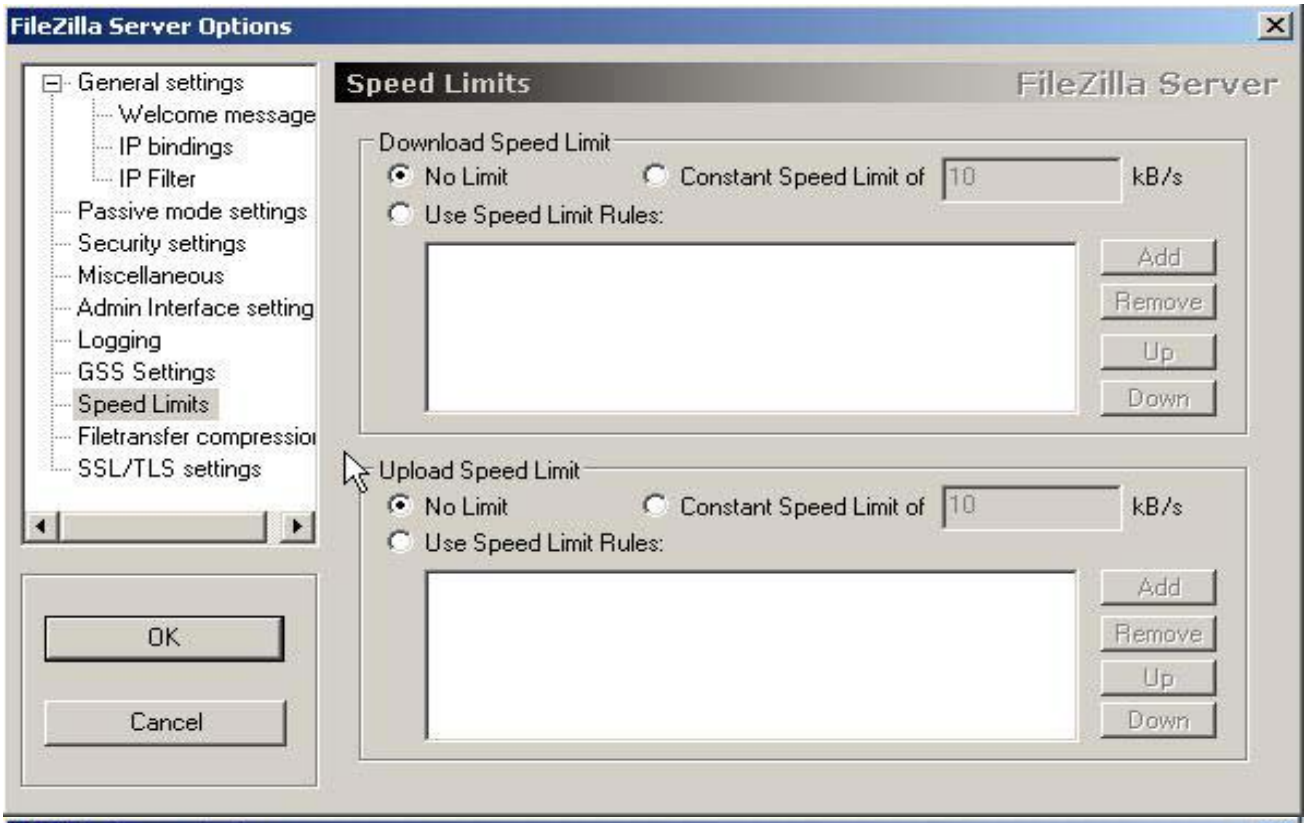
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Speed Limits
FileZilla Server
Download Speed Limit
No Limit
Constant Speed Limit of
10
kB/s
Use Speed Limit Rules:
Add
Remove
Up
Down
Upload Speed Limit
No Limit
Constant Speed Limit of
10
kB/s
Use Speed Limit Rules:
Add
Remove
Up
Down
OK
Cancel

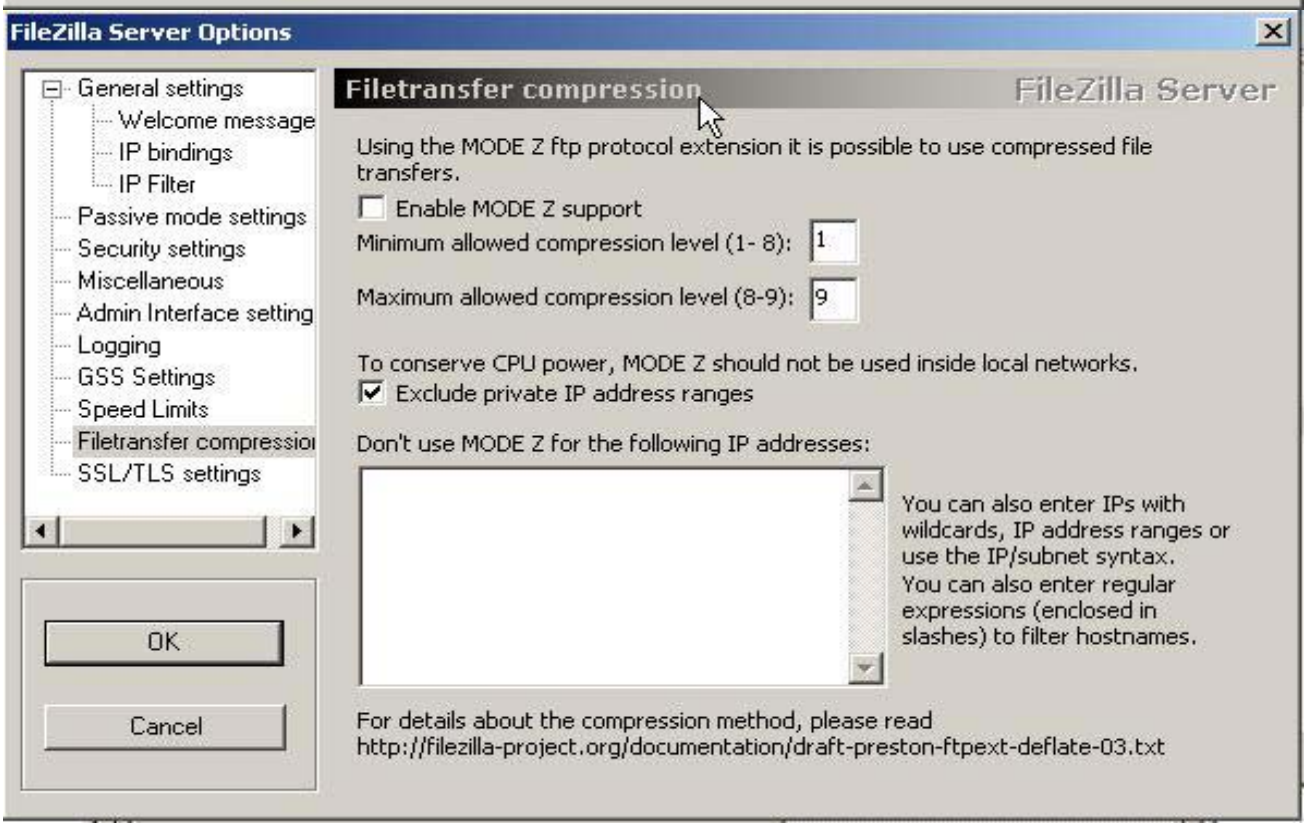
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
Filetransfer compression
FileZilla Server
Using the MODE Z ftp protocol extension it is possible to use compressed file transfers.
Enable MODE Z support
Minimum allowed compression level (1- 8):
1
Maximum allowed compression level (8-9):
9
To conserve CPU power, MODE Z should not be used inside local networks.
Exclude private IP address ranges
Don't use MODE Z for the following IP addresses:
You can also enter IPs with wildcards, IP address ranges or use the IP/subnet syntax.
You can also enter regular expressions (enclosed in slashes) to filter hostnames.
For details about the compression method, please read
http://filezilla-project.org/documentation/draft-preston-ftpext-deflate-03.txt
OK
Cancel

 © Canon 2006

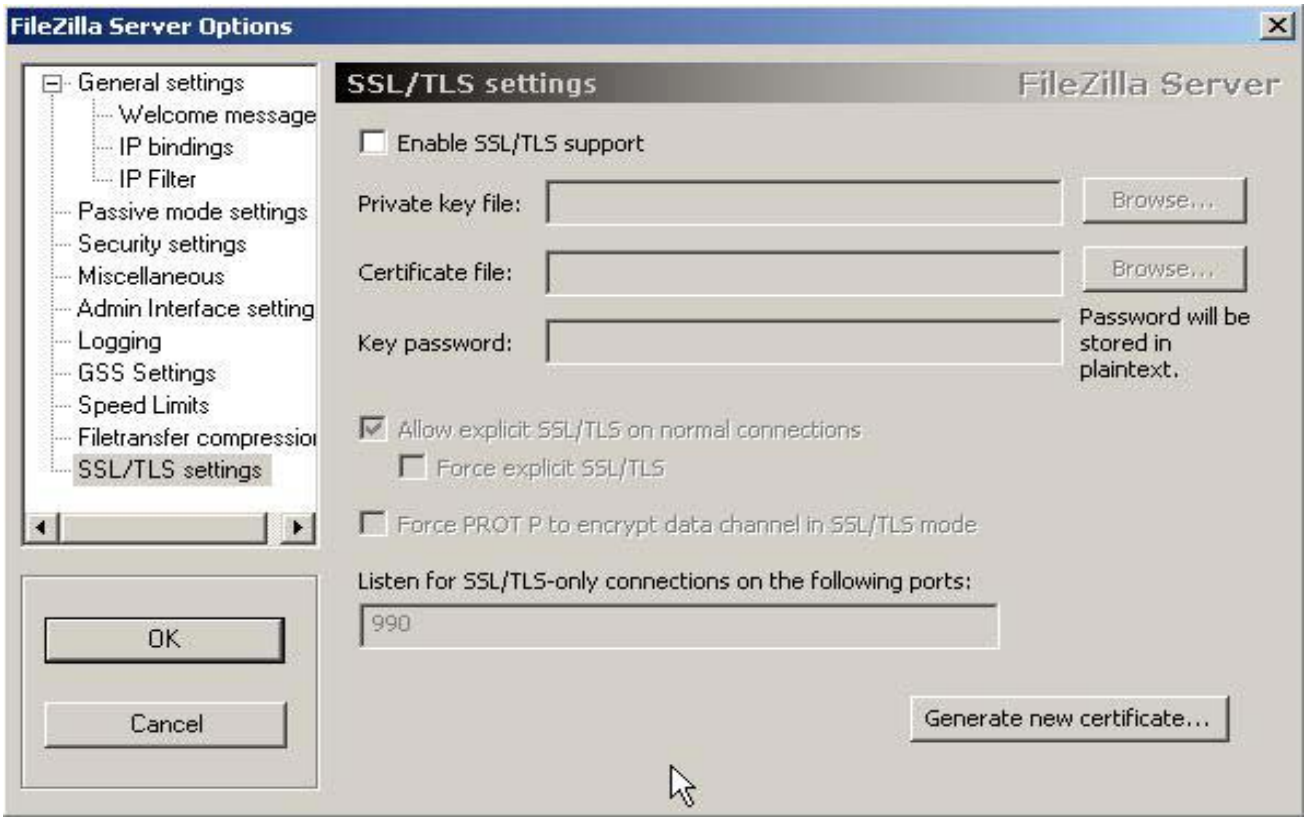
FileZilla Server Options
General settings
Welcome message
IP bindings
IP Filter
Passive mode settings
Security settings
Miscellaneous
Admin Interface setting
Logging
GSS Settings
Speed Limits
Filetransfer compressio
SSL/TLS settings
OK
Cancel
SSL/TLS settings
FileZilla Server
Enable SSL/TLS support
Private key file:
Browse...
Certificate file:
Browse...
Key password:
Password will be stored in plaintext.
Allow explicit SSL/TLS on normal connections
Force explicit SSL/TLS
Force PROT P to encrypt data channel in SSL/TLS mode
Listen for SSL/TLS-only connections on the following ports:
990
Generate new certificate...

 © Canon 2006

Once all the server settings have been checked, then you will need to create a user for the FTP server. This will ultimately identify the WFT-E1A to the server. Similar fields will appear in other FTP server programs.

To do this, select “Users” from the “Edit” menu.

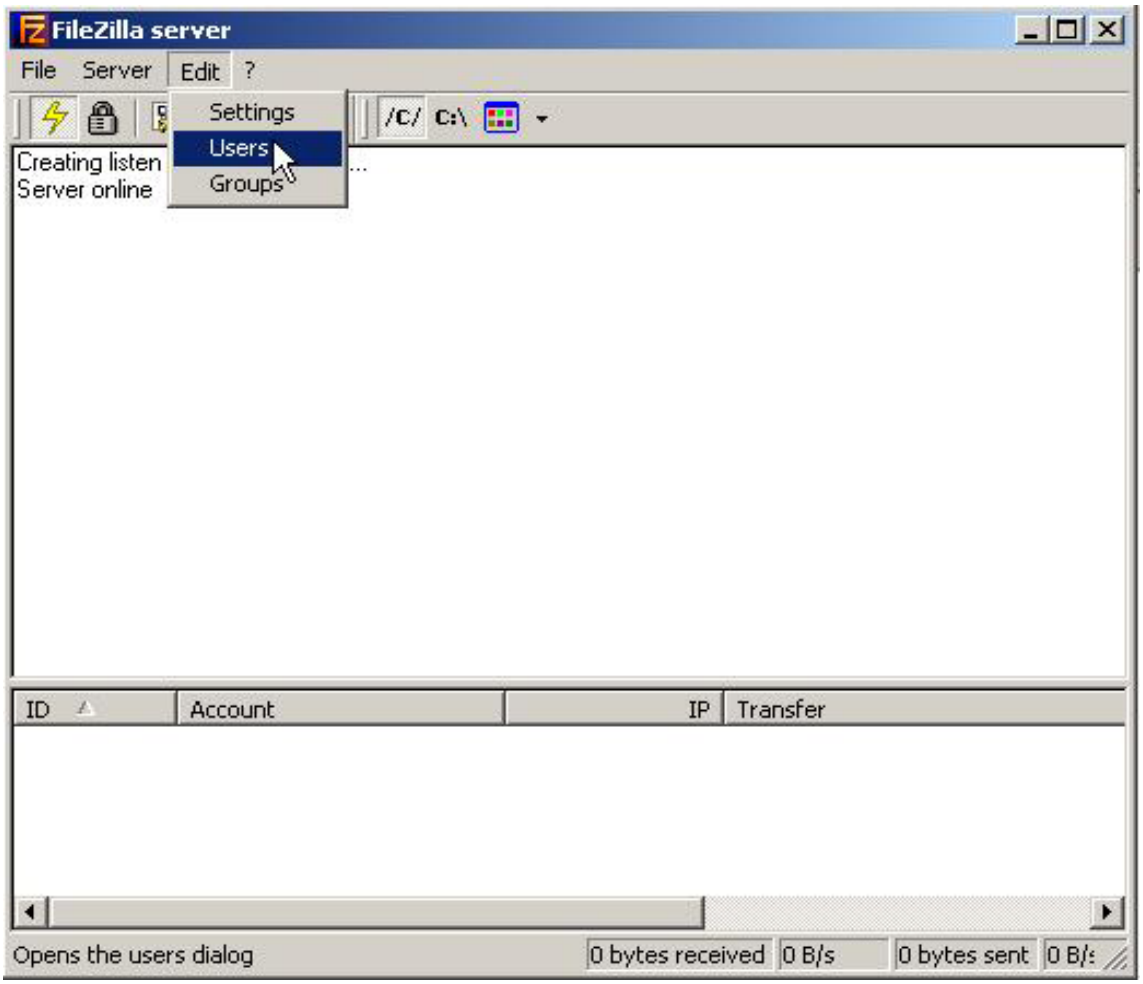

 © Canon 2006

In the General section of the Users screen, click the add button to add a user to the FTP server

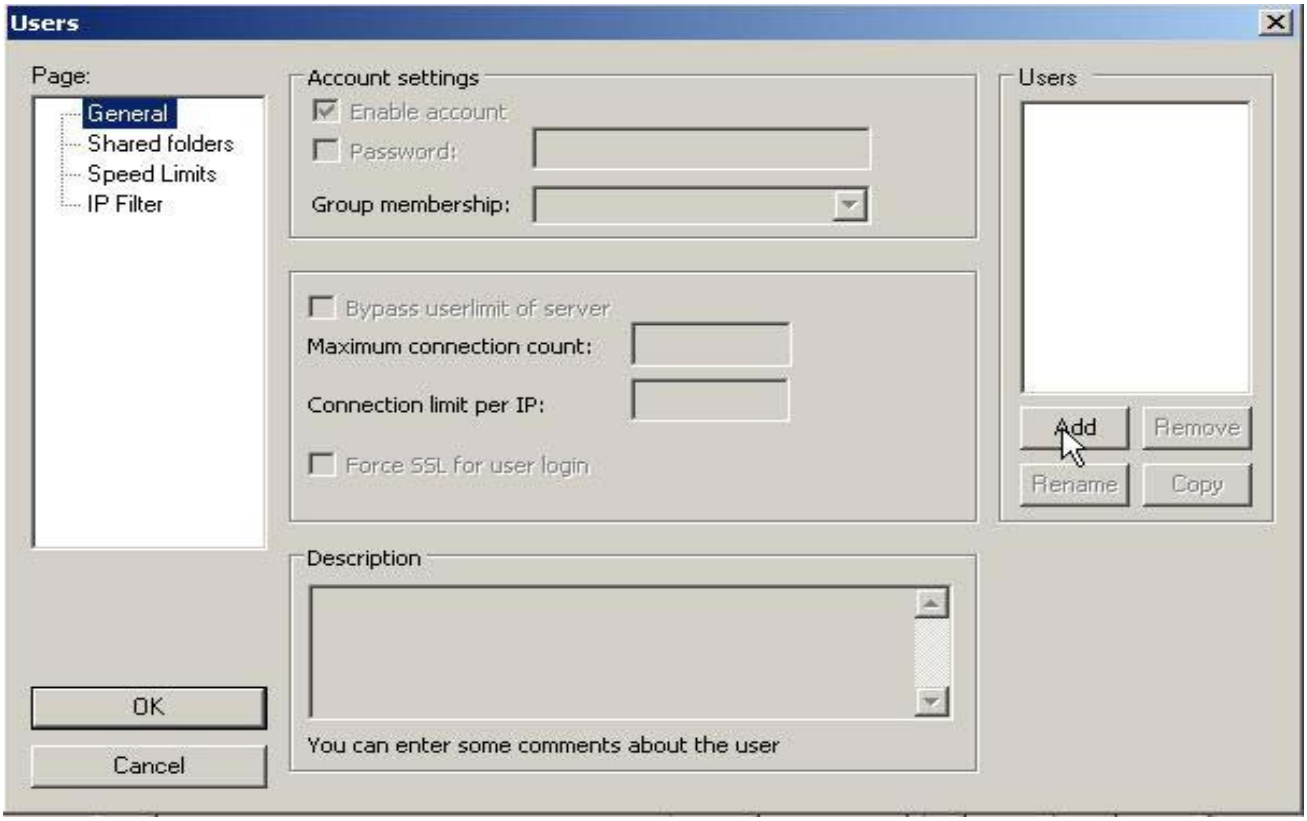

Type in a username, ensuring there are no spaces or other non alphanumeric characters. Here the username we have selected is canonuk. Click OK

Add user account
Please enter the name of the user account that should be added:
canonuk
User should be member of the following group:
<none>
OK
Cancel

 © Canon 2006

Back in the General section of the Users screen, tick the password box and enter a password, again only using alphanumeric characters and no spaces. Here we are using the password pass.

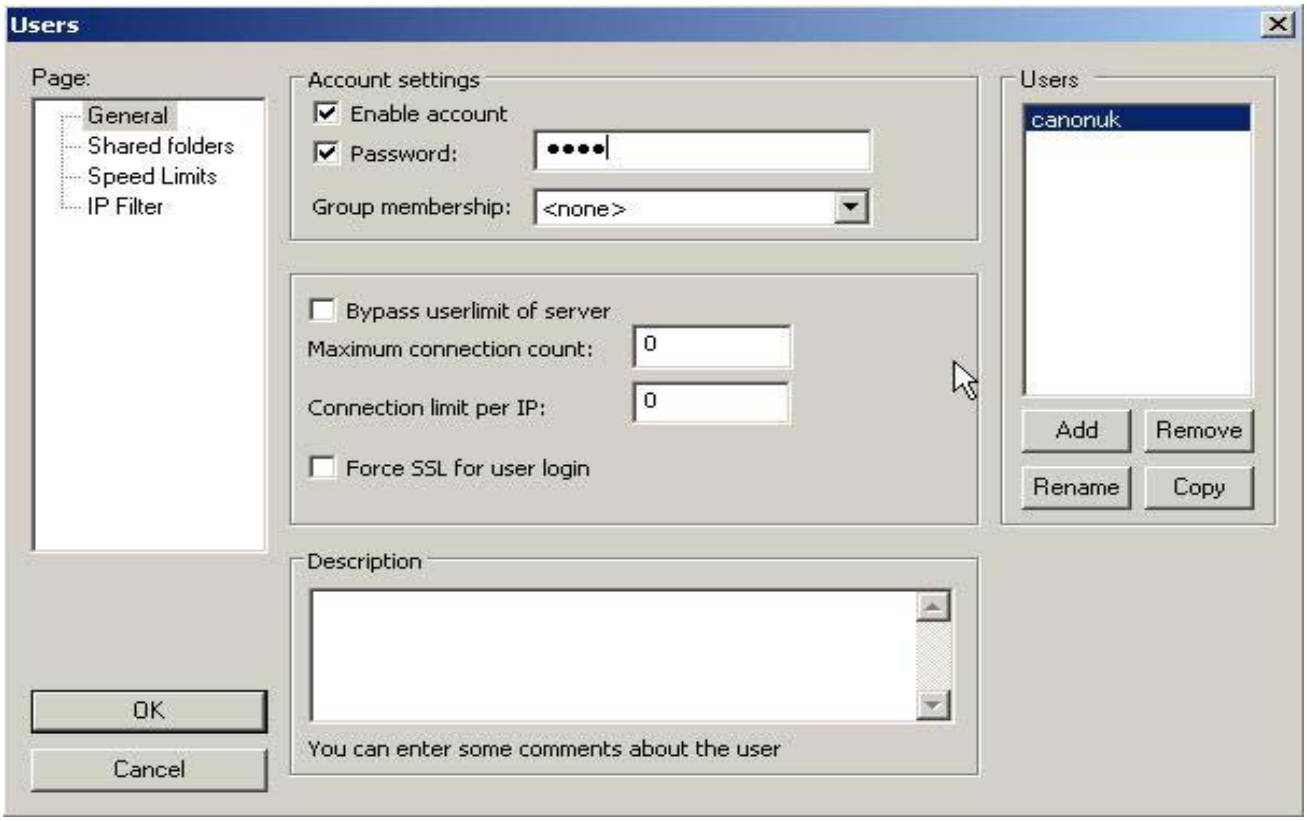

 © Canon 2006

Before the next step, create a folder on your C: driver called FTP. This is where your images will be transferred to. This can be a folder anywhere on your hard drive but for ease of use we'll stick to the C: drive here. Make you don't include any spaces or non alphanumeric characters in this folder name.

Select the Shared folders section of the Users menu. In the Shared folders click the Add button to add a folder where the images will be transferred to.

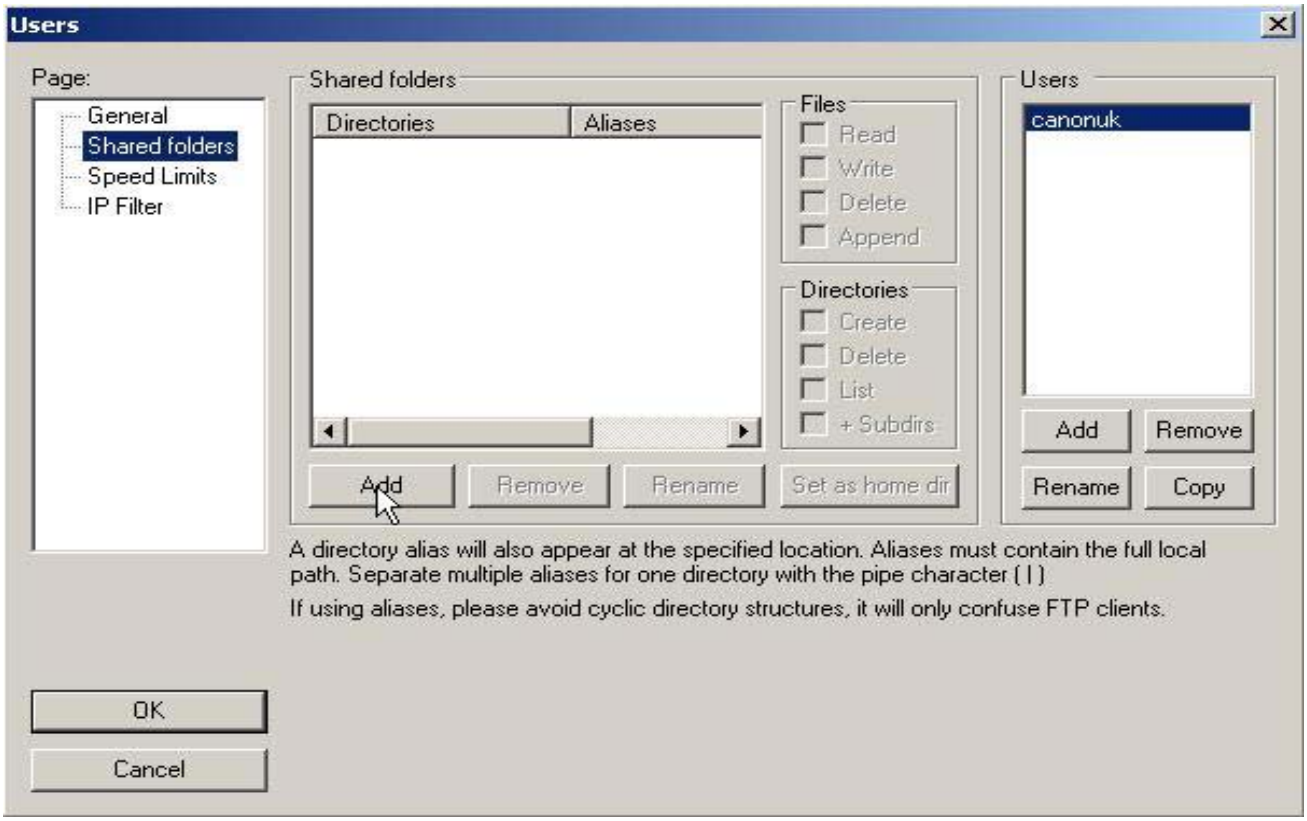

The "Browse for Folder" window appears

 © Canon 2006

Select the FTP folder we created on the C: drive earlier and click OK.

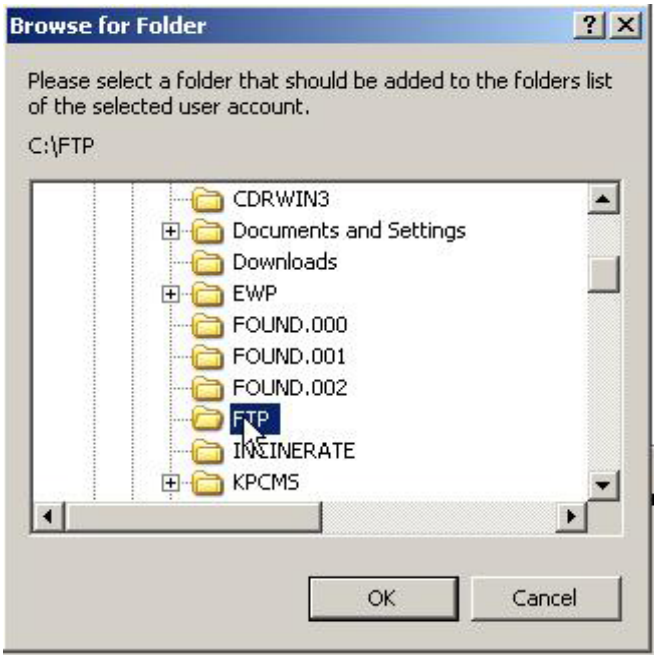

Now we have defined our destination folder, you must set the permissions of access for the WFT-E1A. You must set full read and write permissions on the destination folder, failure to do so will result in the WFT-E1A issuing an error and failing to transmit the picture.

 © Canon 2006

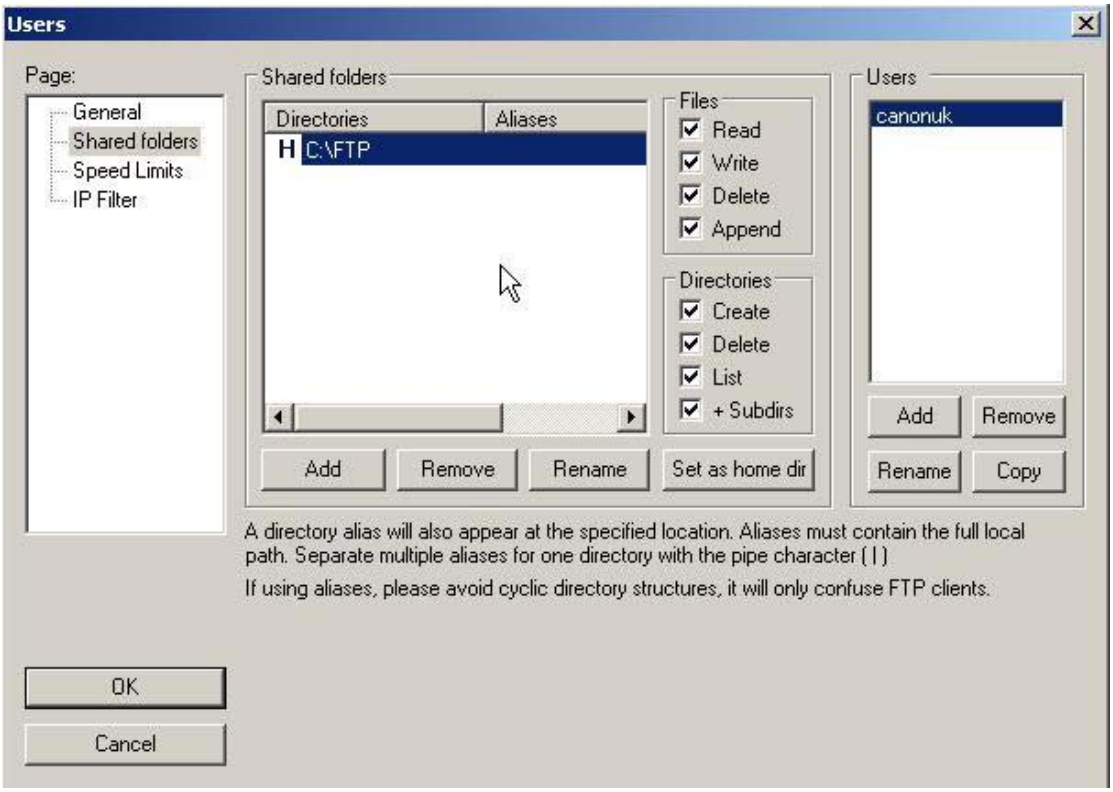
Users
Page:
General
Shared folders
Speed Limits
IP Filter
Shared folders
Directories
Aliases
H C:\FTP
Files
Read
Write
Delete
Append
Directories
Create
Delete
List
+ Subdirs
Add
Remove
Rename
Set as home dir
Users
canonuk
Add
Remove
Rename
Copy
A directory alias will also appear at the specified location. Aliases must contain the full local path. Separate multiple aliases for one directory with the pipe character (|)
If using aliases, please avoid cyclic directory structures, it will only confuse FTP clients.
OK
Cancel

 © Canon 2006

Select the speed limit page and select “No Limit” on both download and upload.

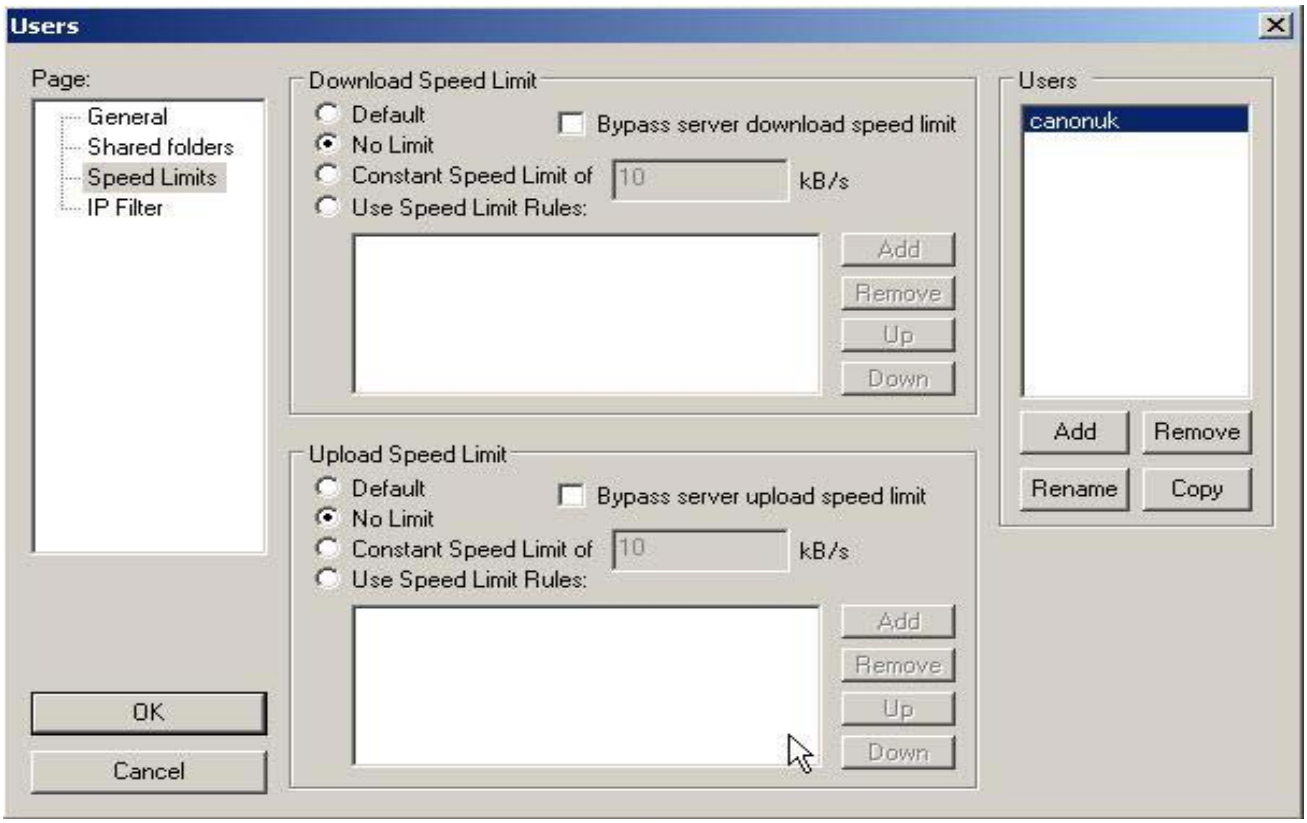

 © Canon 2006

The IP Filter page should be left blank. Click OK to return to the Server window

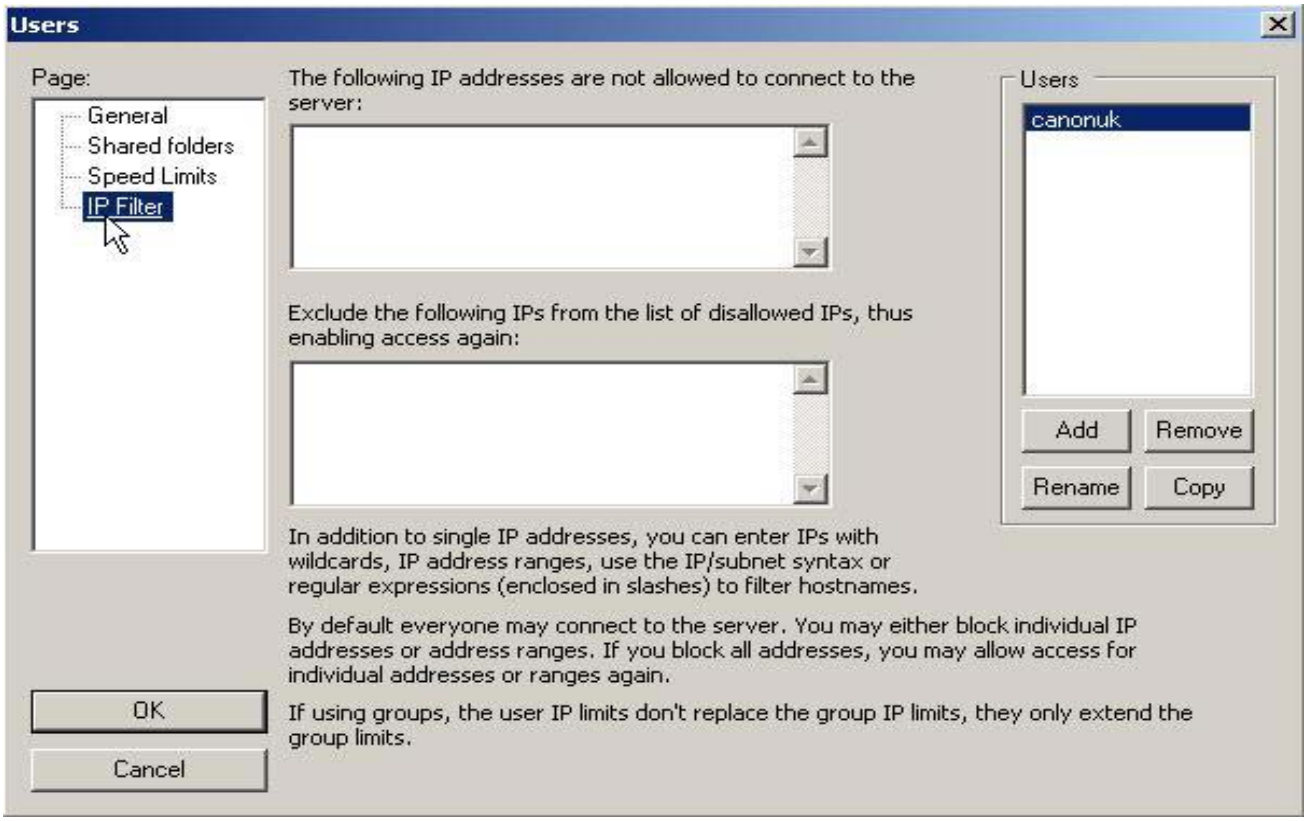
Users
Page:
General
Shared folders
Speed Limits
IP Filter
The following IP addresses are not allowed to connect to the server:
Exclude the following IPs from the list of disallowed IPs, thus enabling access again:
In addition to single IP addresses, you can enter IPs with wildcards, IP address ranges, use the IP/subnet syntax or regular expressions (enclosed in slashes) to filter hostnames.
By default everyone may connect to the server. You may either block individual IP addresses or address ranges. If you block all addresses, you may allow access for individual addresses or ranges again.
If using groups, the user IP limits don't replace the group IP limits, they only extend the group limits.
Users
canonuk
Add
Remove
Rename
Copy
OK
Cancel

 © Canon 2006

From the main server window click on the Server menu and make sure there is a tick next to Active. This ensures that the server is active, running and ready to receive data from the WFT-E1A unit.

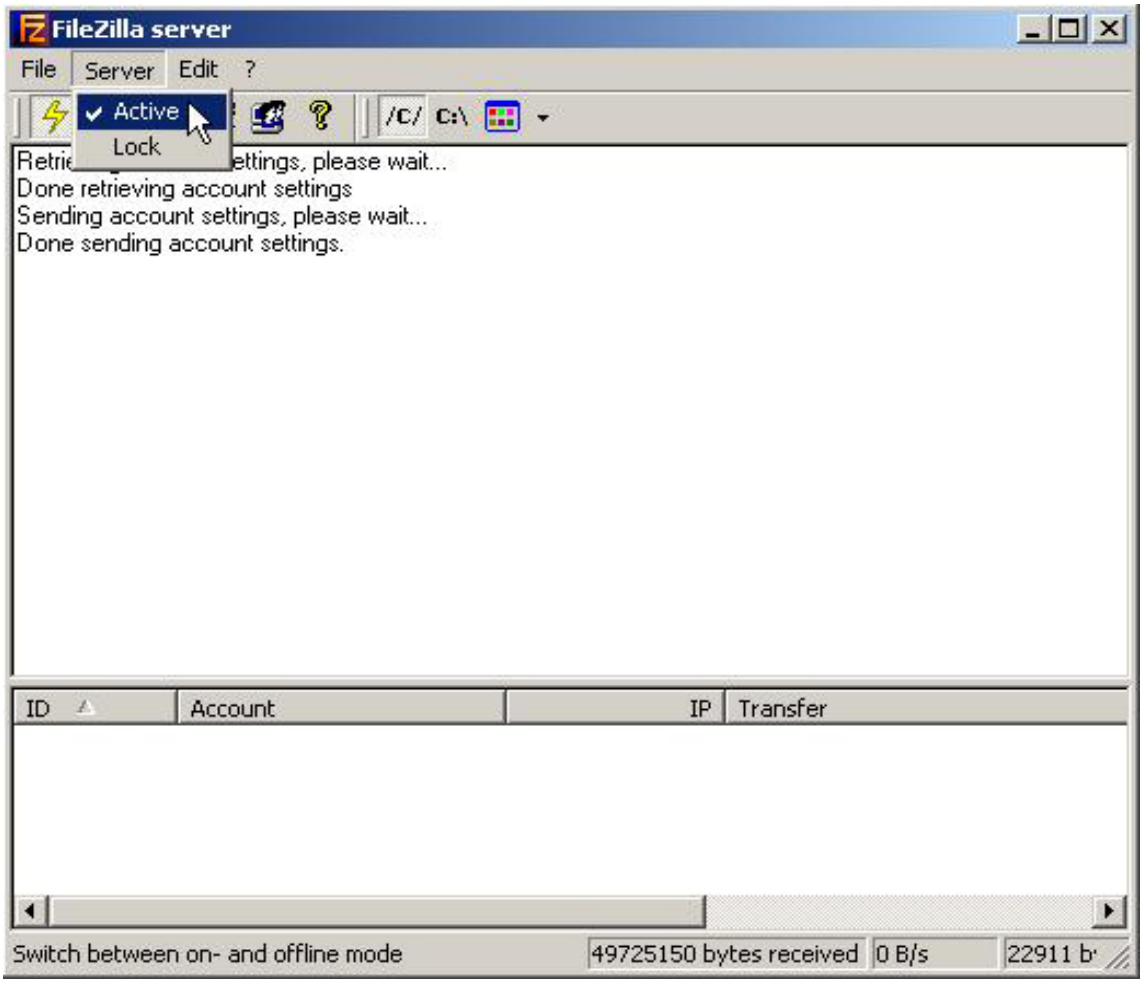

Ensure your server shows as running in the taskbar here shown as the FZ (Filezilla) logo.



Stage 2 is now complete, the computer is ready to receive pictures via your wireless network from the WFT-E1A, and we can now move onto stage 3, setting up the WFT-E1A on the camera body itself.

 © Canon 2006

Stage 3 – Setting up the WFT-E1A using the WFT-E1A Utility

Load the utility from the Canon WFT-E1A disc.

In the first tab TCP/IP, select “Use DHCP Server” as the router will issue an IP address to the camera.

DNS servers are not required in this example so should be left unticked.

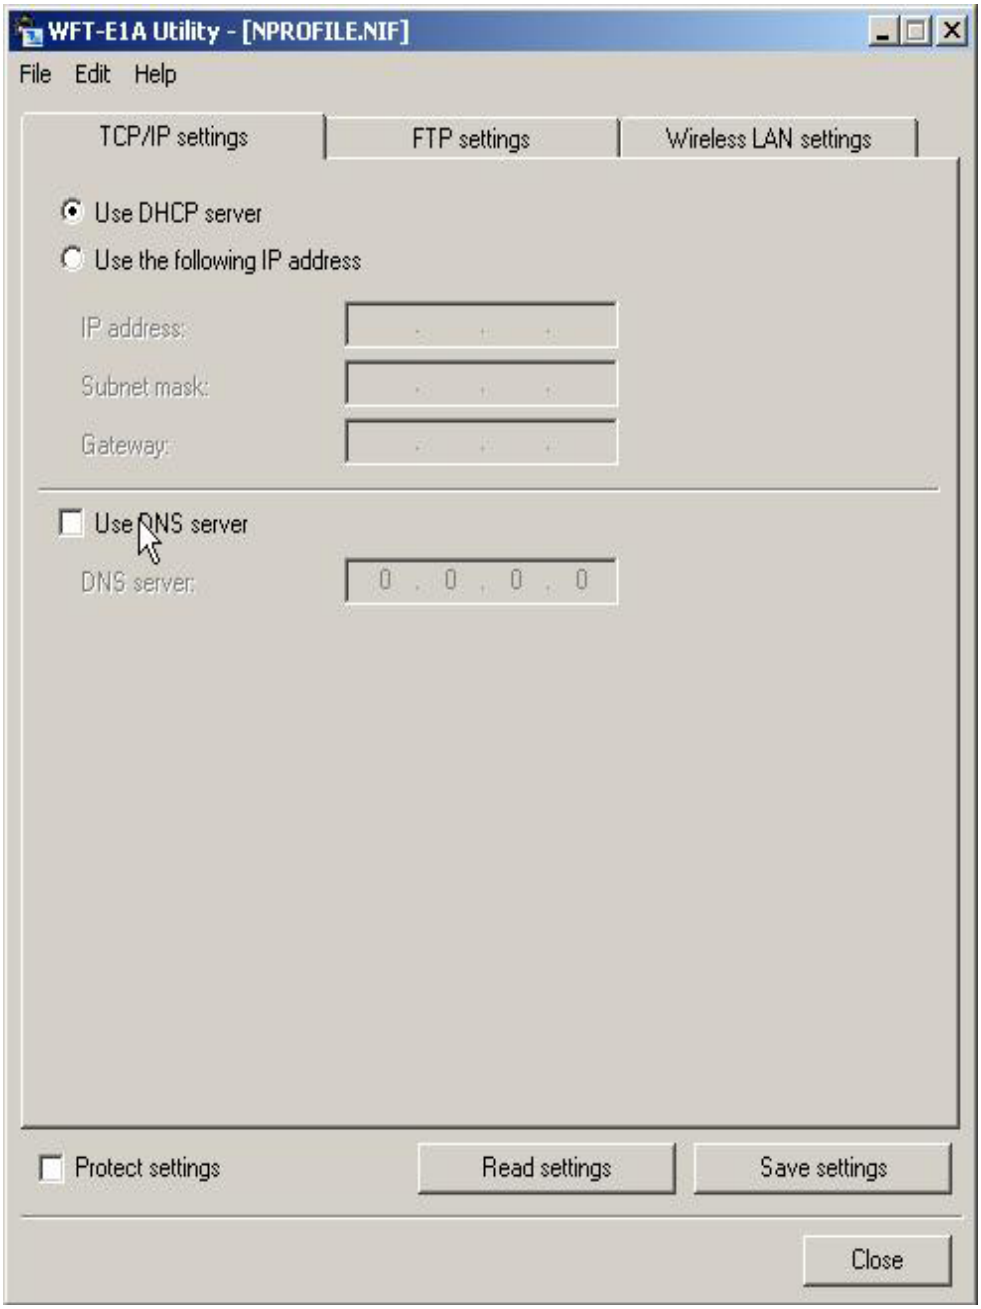

 © Canon 2006

Select the FTP settings tab, here we will enter settings that match the FTP server settings we set up in stages 1 & 2 within the Local Area Connection settings and Filezilla FTP server.

The target server address should be should match the address of the PC's IP address that is running the server. In this case it is set to 192.168.2.40 The port number should match the port number we opened in the FTP server, in this case Port 21 (which is in fact the industry standard port for FTP transfers).

The server name should be left blank, as the Target Server IP address identifies the FTP server, and as the target folder is set from within the FTP server Filezilla itself, then you should specify / as the target folder which means "Root folder" in FTP terms. Leave passive mode off, and overwrite same file on if you want to

Use the login and password you set in Filezilla earlier, in this case we are using the username canonuk and the password pass. Ensure that you use the exactly the same characters, and ensure they are the same case, any mismatch in the username and password will result in the WFT-E1A issuing an error and failing to transmit its images.

No proxy is required so leave this blank.

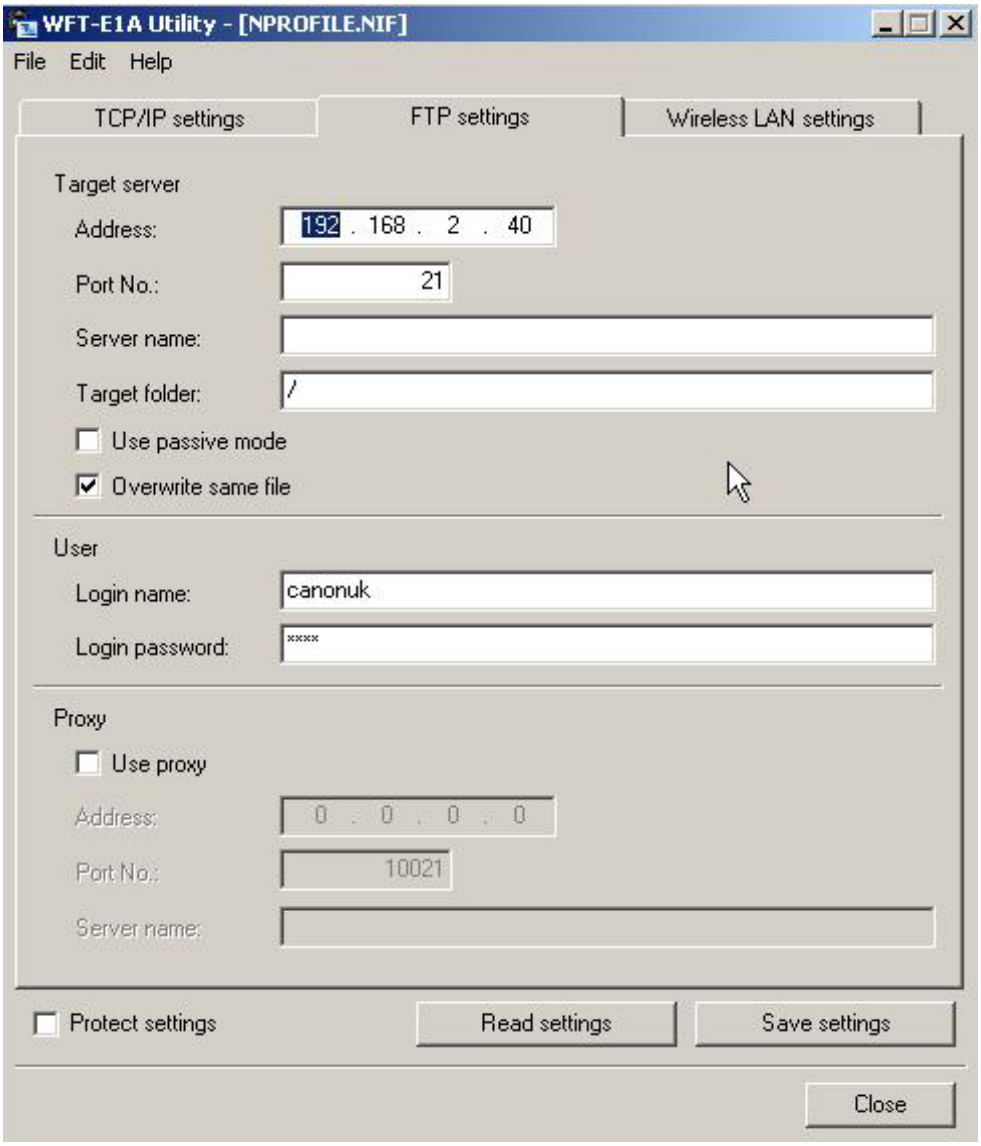

 © Canon 2006

There is no need to enter any settings on the wireless LAN settings page as we are using a wired LAN connection.

Finally save these settings to your CF card using a card reader / writer device connected to your PC, ready to insert into the camera connected to the WFT-E1A

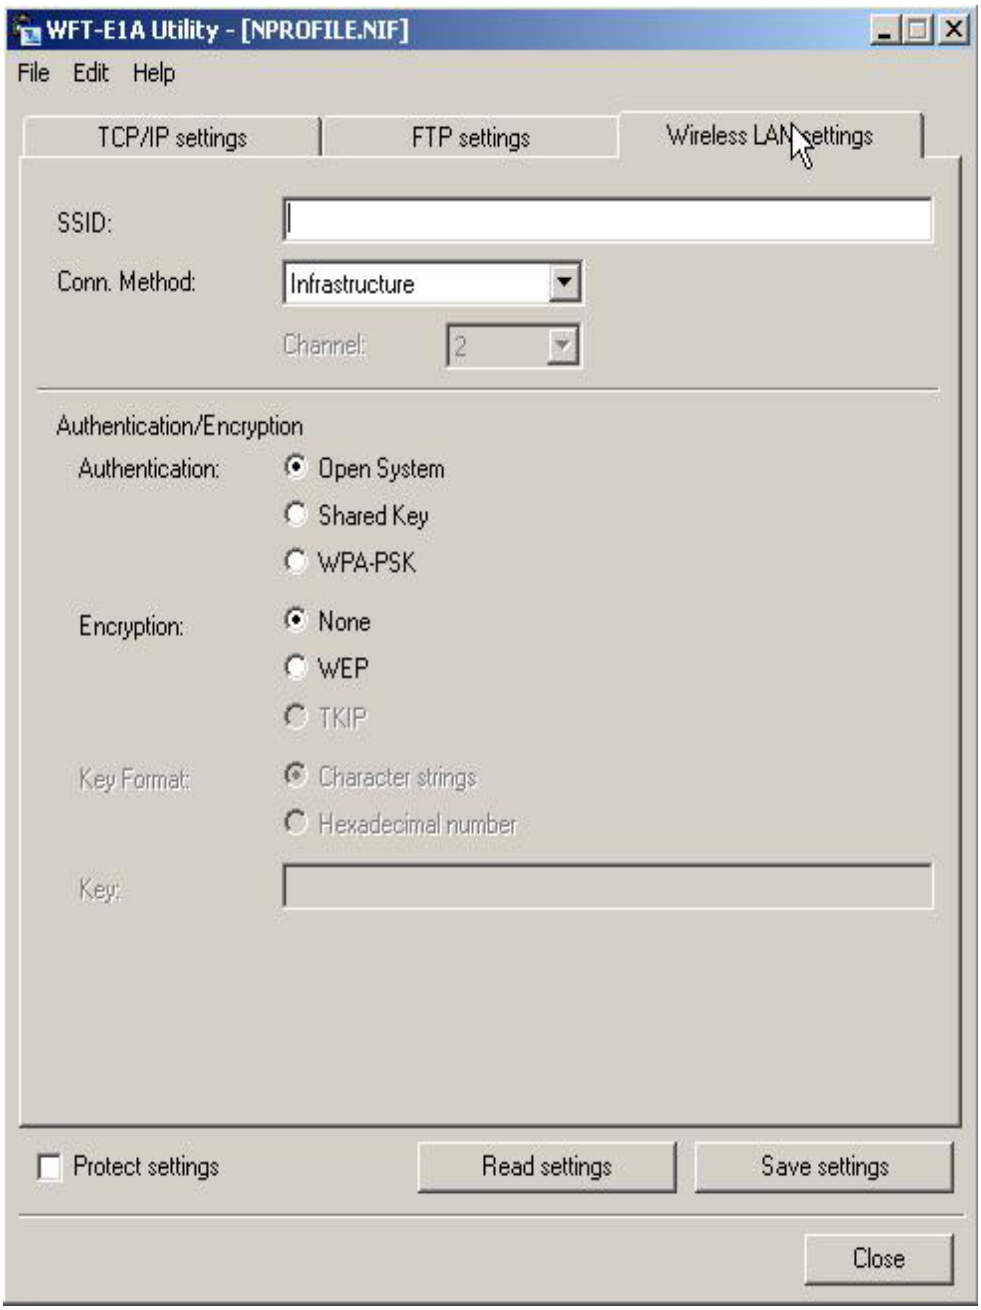

 © Canon 2006

Lastly you will need to load the settings file into your camera. Insert the CF card containing the .NIF file and load the settings into your camera as detailed on page 23-25 of the WFT-E1A manual.

When you switch on the camera and the WFT-E1A after a short period the orange light should switch on and remain steady and the display should show the LAN connected symbol as in the picture below.

After taking a picture you should see some activity in your FTP server as it receives the files

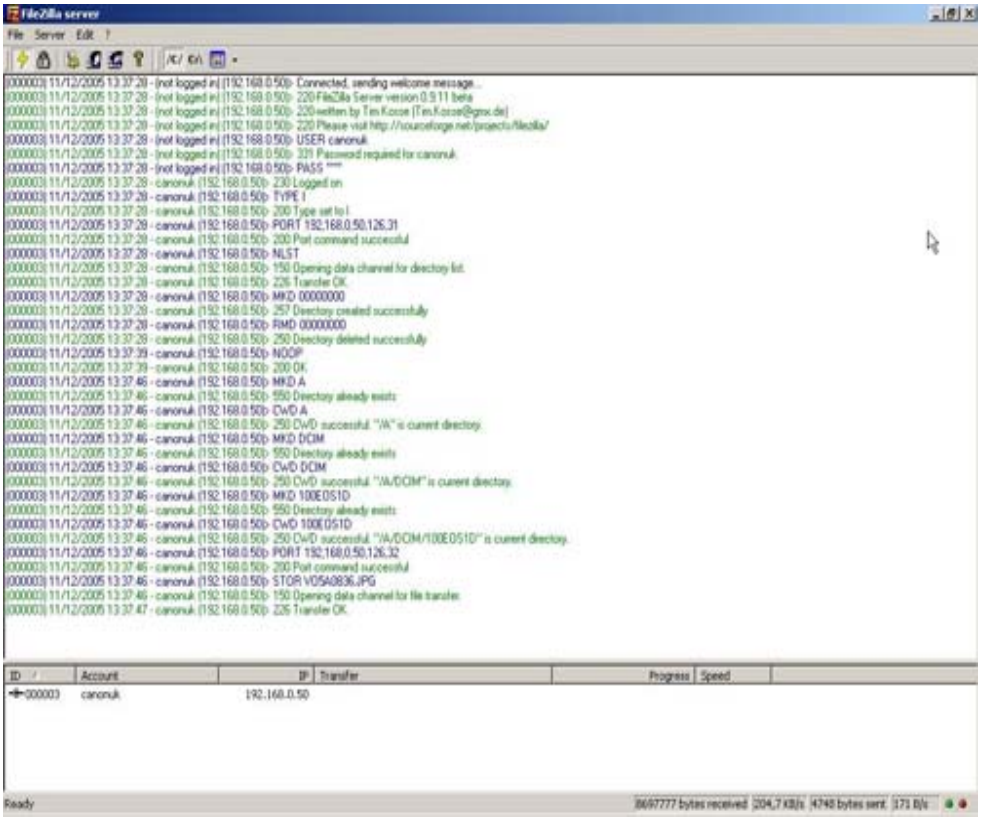

That's it! Enjoy using the WFT-E1A!

Revision 1.2 © Canon 2006

 © Canon 2006